

**Frozen Beverage Dispensers**  
EVERYONE LOVES FROZEN®

# 37X SERIES

## INSTALLATION & OPERATION MANUAL



**MODELS**  
**372/373**  
24-37XM-0013\_03

This manual is for general informational purposes only and is not intended to cover every potential installation or operational possibility. The parts and equipment addressed herein are warranted only to the extent covered by FBD's Parts and Equipment Warranty. FBD makes no express warranties as to any matter whatsoever and hereby disclaims all implied warranties including, without limitation, the implied warranties of merchantability and fitness for any particular purpose. In no event shall FBD be liable or obligated to any customer or to any third party for incidental, consequential, or special damages, regardless of the theory of liability, arising out of, or in any manner related to FBD parts, equipment or any delay with respect to its delivery.

The information contained in this document is subject to change without notice.

© 2022 FBD Partnership, L.P. All Rights Reserved.

**FBD TECHNICAL SUPPORT: 866-323-2777 (U.S.), 852-2369-3998 (INTERNATIONAL), or [www.fbdfrozen.com](http://www.fbdfrozen.com)**



## TABLE OF CONTENTS

<b>1. SAFETY .....</b>	<b>3</b>
1.1 ELECTRICAL .....	3
1.2 COMPRESSED GASES .....	3
1.3 GENERAL PRECAUTIONS .....	4
1.4 INSULATION BLOWING GAS .....	4
1.5 CLIMATIC CLASSES .....	4
1.6 UNIT IN STORAGE .....	4
<b>2. SPECIFICATIONS AND REQUIREMENTS .....</b>	<b>5</b>
2.1 GENERAL REQUIREMENTS .....	5
2.2 ELECTRICAL REQUIREMENTS .....	5
2.3 DIMENSION AND WEIGHT SPECIFICATIONS .....	5
<b>3. RECEIVING AND UNPACKING DISPENSER .....</b>	<b>6</b>
3.1 RECEIVING .....	6
3.2 UNPACKING .....	6
<b>4. INSTALLATION .....</b>	<b>6</b>
4.1 GENERAL LOCATION REQUIREMENTS .....	6
4.2 DISPENSER MOUNTING .....	6
4.3 SELF-CONTAINED REFRIGERATION MODELS .....	7
4.4 UNIVERSAL AND MULTI-GAS CONFIGURATIONS .....	7
4.5 PREPARE ELECTRICAL POWER CONNECTION .....	8
4.6 SUPPLY CONNECTIONS .....	8
4.7 CONNECTING TO WATER SUPPLY .....	9
4.8 CONNECTING TO GAS SUPPLY .....	10
4.9 CONNECTING TO SYRUP SUPPLY .....	10
<b>5. STARTING UP THE DISPENSER .....</b>	<b>11</b>
5.1 LEAK CHECK AND PRIME .....	11
5.2 INITIAL POWER UP .....	12
5.3 WATER FLOW RATE AND BRIX .....	13
5.4 FILLING BARREL AND STARTING .....	14
<b>6. DISPENSER OPERATION .....</b>	<b>15</b>
6.1 FREEZE .....	15
6.2 OFF .....	15
6.3 DEFROST .....	15
6.4 DRINK QUALITY .....	15
6.4.1 DRINK TOO "FIRM" OR COLD .....	16
6.4.2 DRINK TOO "SLOPPY" OR WARM .....	16
6.4.3 DRINK TOO HEAVY .....	16
6.4.4 DRINK TOO LIGHT .....	16
<b>7. MENUS AND NAVIGATION .....</b>	<b>17</b>
7.1 KEYPAD .....	17
7.2 HOME MENU .....	18
7.3 POP-UP MENU .....	18
7.4 MENU TREE .....	19
7.5 MAIN MENU .....	20
7.6 READOUTS MENU .....	20
7.7 FAULT CODE HISTORY MENU .....	21
7.8 SERVICE MENU .....	21
7.9 MAINTENANCE MENU .....	22



TABLE OF CONTENTS (CONTINUED)

7.10	SETTINGS MENU .....	24
7.11	CLOCK AND SCHEDULE MENU .....	27
7.12	DATE AND TIME MENU .....	27
7.13	DEFROST SCHEDULE MENU .....	28
7.14	AUTO DEFROST MENU .....	28
7.15	WAKE/SLEEP SCHEDULE MENU .....	29
7.16	MANUAL ON/OFF MENU .....	29
7.17	BEVTRAK™ MENU .....	30
7.18	MODEM SETTINGS MENU .....	30
7.19	MACHINE TOTALS MENU .....	31
7.20	RESTORE FACTORY SETTINGS MENU .....	31
7.21	DIAGNOSTICS MENU .....	32
<b>8.</b>	<b>CLEANING AND SANITIZING .....</b>	<b>33</b>
8.1	GENERAL INFORMATION .....	33
8.2	DAILY CLEANING .....	33
8.3	SANITIZING .....	33
<b>9.</b>	<b>PREVENTIVE MAINTENANCE .....</b>	<b>35</b>
9.1	AIR FILTER CLEANING .....	35
9.2	REAR SEAL REPLACEMENT .....	36
9.3	BACKFLOW PREVENTER MAINTENANCE .....	37
<b>10.</b>	<b>TROUBLESHOOTING .....</b>	<b>38</b>
10.1	HOME MENU MESSAGES .....	38
10.2	FAULT CODES .....	40
10.3	DIAGNOSTIC FAULT CODES .....	47
<b>11.</b>	<b>DIAGRAMS AND SCHEMATICS .....</b>	<b>49</b>
11.1	MOUNTING TEMPLATES .....	49
11.2	FLOW DIAGRAMS .....	51
11.3	ELECTRICAL WIRING DIAGRAMS .....	54
11.4	REFRIGERATION SCHEMATIC DIAGRAMS .....	66



## 1. SAFETY

### 1.1 Electrical

This dispenser must be properly electrically grounded to avoid possible fatal electrical shock or serious injury to the operator. The power cord is provided with a three-prong grounded plug. If a three-hole grounded electrical outlet is not available, use an approved method to ground the dispenser. Only qualified electricians should perform this task and the work performed should meet all applicable codes.

The plug must be accessible at all times so that the dispenser can be shut off in case of emergency. Always disconnect electrical power to the dispenser to prevent personal injury before attempting any internal maintenance.

There is a switch on the front of the dispenser's e-box that acts as an interrupt to the main control board. When the switch is in the OFF position, the dispenser will remain powered but the control board will not. The switch should not be considered a substitute for unplugging the unit from the outlet. Only qualified personnel should service internal components or electrical wiring.

### 1.2 Compressed Gases



Strict attention must be observed in the prevention of gas leaks in the entire gas and frozen drink system. If a gas leak is suspected, immediately ventilate the contaminated area before attempting to repair the leak as prolonged exposure to high concentrations of carbon dioxide (CO<sub>2</sub>) or nitrogen (N<sub>2</sub>) could lead to death. Personnel exposed to high concentrations of CO<sub>2</sub> gas may experience dizziness, asphyxiation, confusion, fatigue, headaches, and/or tremors which are followed rapidly by loss of consciousness and suffocation. Personnel exposed to high concentrations of N<sub>2</sub> gas may experience dizziness, drowsiness, nausea, vomiting, diminished mental alertness, and/or loss of consciousness.

All applicable laws and regulations pertaining to the use, storage, and transport of gas cylinders must be observed. To avoid personal injury and/or property damage, always secure gas cylinders in an upright position with a safety chain. A gas cylinder with a damaged or detached valve can cause serious personal injury.

When using compressed air for the active charge system, all air compressor equipment must be operated only by authorized and trained personnel. The air intake should be from a clean, outside, fresh air source. If local laws and regulations require it, screens or filters to clean the air should be used based on equipment manufacturer's recommendations. Air compressors should never be operated at speeds faster than the manufacturer's recommendation and equipment should not be allowed to become overheated.



## 1.3 General Precautions

This equipment, depending on the model, weighs up to 215 pounds (98 kilograms) when empty and is top-heavy. To avoid personal injury or equipment damage, do not attempt to lift the dispenser without help. The use of a mechanical lift is highly recommended. When lifting and positioning the dispenser, it should always stay in a vertical upright position.

When the dispenser is mounted onto a base cart, it must be secured with bolts as instructed in Section 4.2. Use caution when moving the cart. Avoid surfaces that are not level and smooth under the width of the casters to prevent tipping.



## 1.4 Insulation Blowing Gas

This equipment was built using polyurethane foam. For safety, please keep dispenser away from fire.

## 1.5 Climatic Classes

This equipment may be rated for climatic classes 0, 1, 2, 3, 4, 5, 6, 7, or 8. The table below provides additional information on the specific temperature, relative humidity, and moisture content acceptable under these climatic classes. Please make sure the dispenser is placed and operated in conditions described in **Section 4.3**. Reference dispenser nameplate label to identify climatic class, if applicable.

Climatic Class	Dry Bulb Temperature (°C)	Relative Humidity (%)	Dew Point Temperature (°C)	Moisture Content (g/Kg)
0	20	50	9.3	7.3
1	16	80	12.6	9.1
2	22	65	15.2	10.8
3	25	60	16.7	12.0
4	30	55	20.0	14.8
5	40	40	23.9	18.8
6	27	70	21.1	15.8
7	35	75	30.0	27.3
8	23.9	55	14.3	10.2

## 1.6 Unit in Storage

If a unit is going to be placed in storage for an extended period (more than 90 days), it is recommended that all rubber components be replaced (o-rings, rear seal, expansion tank, etc.). Failure to replace rubber components could cause leaks which may damage components.



## 2. SPECIFICATIONS AND REQUIREMENTS

### 2.1 General Requirements

Requirement	
Syrup Supply Pressure	70 - 72 PSI* (483 - 496 kPa)
Water Supply Pressure	30 PSI (207 kPa) Minimum Flowing Pressure 70 PSI (483 kPa) Maximum Static Pressure
Gas Supply Pressure	70 - 72 PSI (483 - 496 kPa)
Clearance	3" (76 mm) Sides and Back, 12" (305 mm) Top
Refrigerant†	R404A <b>OR</b> R448-A

### 2.2 Electrical Requirements‡

Requirement		
Frequency	60 Hz	50 Hz
Operational Voltage	230 VAC ± 10%	230 VAC ± 10%
Current	20 A	20 A
Minimum AMP Breaker	20	20

### 2.3 Dimension and Weight Specifications

Specifications	372	372 MFLV	373
Width	15.8" (400 mm)	15.8" (400 mm)	20.1" (511 mm)
Depth	25.2" (640 mm)	25.2" (640 mm)	25.2" (640 mm)
Height - Short Door	31.5" (800 mm)	31.5" (800 mm)	31.5" (800 mm)
Height - Tall Door	37.7" (958 mm)	N/A	N/A
Weight - Empty	196 lb (89 kg)	199 lb (90 kg)	215 lb (98 kg)
Weight - Operational	212 lb (96 kg)	217 lb (98 kg)	239 lb (108 kg)
Weight - Shipping	228 lb (103 kg)	233 lb (106 kg)	304 lb (138 kg)

\* All pressure values are listed in the manual in gauge pressure.

† Reference dispenser nameplate label to identify refrigerant type.

‡ General requirements only. Always check dispenser nameplate label for specific rating information.



## 3. RECEIVING AND UNPACKING DISPENSER

### 3.1 Receiving

Each dispenser is tested and thoroughly inspected before shipment. At the time of shipment, the carrier accepts the dispenser and any claim for damages must be made with the carrier. Upon receiving the dispenser from the delivering carrier, carefully inspect carton for visible indication of damage. If damage is present, have carrier note same on bill of lading and file a claim with the carrier.

### 3.2 Unpacking

- A. Cut banding from shipping carton and remove carton by lifting up. Remove protective side panels and four corner protectors.
- B. If included, remove drip tray assembly and accessory kit from top packaging. Contact the dealer if any parts are missing or damaged.
- C. Remove side panels from dispenser.
- D. Inspect dispenser for concealed damage. If evident, immediately notify delivering carrier and file a claim against same.
- E. If dispenser is received with a shipping board attached to the bottom, remove shipping board from bottom of dispenser by accessing and removing the bolts located on the under side of the shipping board.
- F. Lift dispenser up by the frame cross bracing and remove lower portion of carton.

## 4. INSTALLATION

### 4.1 General Location Requirements

Dispenser is intended for indoor use only. A flat, level location is required for proper installation. When using a counter, ensure it will support the weight of the dispenser plus the weight of any equipment placed near it. See **Section 2** for equipment weights.

Adequate space above and behind the dispenser is required to allow:

1. Removal of side panels, if service is necessary.
2. Air circulation around vents on sides, back, and top of dispenser.

A well-ventilated room is required for the dispenser. The environment, however, should be stable and not subject to abrupt changes in temperature. The dispenser should not be exposed to direct sunlight or chemicals.

### 4.2 Dispenser Mounting

Countertop - Flush Mounting: The most common installation is placing the dispenser directly on a countertop. If permanently mounting to the countertop, the dispenser should be bolted down and a thin bead of silicone sealant should be applied around the base of the frame. Remove the side panels before applying sealant and refer to the information in **Section 11.1 "Diagrams and Schematics"** for the specific mounting dimensions by model.





**Countertop - Leg Mounting:** Another countertop option is to install 4" support legs (sold separately) to allow for easy cleaning around and under the dispenser. The legs install easily into the same four holes used to bolt the frame to the shipping pallet. As an added benefit, this installation typically meets state and local health department codes.

**Base Cart:** A roll-around base cart (sold separately) can be used when a suitable countertop location is not available. Dispensers installed to base carts must be bolted to the cart to avoid the dispenser from falling off which could result in serious injury or death. Once installed, seal the dispenser to the cart using a bead of clear silicone caulk around the base of the frame.

### 4.3 Self-Contained Refrigeration Models

Adequate clearance around the dispenser is required for proper air flow. Failure to provide proper clearance will reduce capacity and can damage the refrigeration system. See the specifications page for clearance requirements. Avoid enclosed installations if possible; recirculated hot discharge air from the dispenser can impact performance or damage the system. Such installations require supplemental ventilation such as a fan with a thermal switch to remove the hot discharge air.

An ambient temperature of no more than 75°F (24°C) provides the optimal capacity. As the ambient temperature increases, the dispenser capacity decreases. It is essential that the HVAC system be sized to handle the additional heat load from all self-contained, air-cooled dispensers.

### 4.4 Universal Gas and Multi-Gas Configurations

Some 372 dispensers are equipped with FBD's Multi-Gas (372 standard dispensers) or Universal Gas (372 multi-flavor dispensers) feature. Multi-Gas dispensers have two gas connections—one drives the pump and active charge system, and the other injects gas into the product. Universal Gas dispensers have three gas connections—one drives the pump and active charge systems, a second injects gas into the product in barrel 1, and a third injects gas into the product in barrel 2. This feature allows the user to configure the drink profile for each barrel and is available on all 372 multi-flavor (MFLV) dispensers.

**Main Gas:** The gas fed to the Main Gas connection operates the dispenser's pneumatic components (the water pump, active charge, and any pneumatic faceplates). Compressed air, CO<sub>2</sub>, or N<sub>2</sub> can be used as the dispenser's Main Gas.

**Gas 1 (372 and 372 MFLV) and Gas 2 (372 MFLV only):** The gas (CO<sub>2</sub>, or N<sub>2</sub>) fed to the Gas 1 and Gas 2 connection is injected into the drink in the respective barrel.

The Universal Gas setup allows the operator to adjust the levels of Gas 1 and 2 injected into the drink (a drink's expansion refers to the amount of gas injected). The table below lists the available drink types depending on which gas is selected for Gas 1 or Gas 2 (where applicable). Please refer to **Section 4.6** for additional information related to gas connections for the dispenser and **Section 7.10** for instructions on configuring drink types.

Universal and Multi-Gas Configuration Drink Types				
Dispenser	Main Gas	Gas 1	Gas 2	Available Drink Types
372 Standard Multi-Gas	CO <sub>2</sub> , N <sub>2</sub> , or Air	CO <sub>2</sub> or N <sub>2</sub>	N/A	CO <sub>2</sub> : High Expansion N <sub>2</sub> : Medium Expansion
372 Multi-Flavor Universal Gas	CO <sub>2</sub> , N <sub>2</sub> or Air	CO <sub>2</sub> or N <sub>2</sub>	CO <sub>2</sub> or N <sub>2</sub>	CO <sub>2</sub> : Medium Expansion and High Expansion N <sub>2</sub> : Medium Expansion



## 4.5 Prepare Electrical Power Connection

The mating wall receptacle must be a NEMA L6-20R to match the amperage rating of the dispenser. If the plug on the dispenser is replaced with an alternate, it must have the same amperage rating and provide a grounding prong. The dispenser must be connected to a dedicated circuit with the proper amperage fuse rating; however, do not connect the dispenser to power at this time. This will be done when going through the dispenser's initial power up (**Section 5.2**).

Remove the plug from the power cord and feed the cord through the strain relief located at the back of the dispenser. Tighten the strain relief securely. Reinstall the plug on the power cord and check for continuity on the plug across both “hot legs” and no continuity between each “hot leg” and ground.

**Note:** This dispenser is equipped with pressure limiting switch. The switch will be tripped if the dispenser's refrigeration system is over-pressurized, and will prevent the compressor from operating.



**Risk of Electric Shock:** If the cord or plug becomes damaged, replace only with a cord and plug of the same type provided by the manufacturer or service provider in order to avoid potential hazard.

## 4.6 Supply Connections

The water, syrup, and gas connections can be found at the back of the dispenser. All dispensers will have a bulkhead label near the bulkhead fittings illustrating which supply line connects to each fitting (**Figure 4.1**). The label will differ in size and shape based on the dispenser model. Please refer to the “Bulkhead Fittings” table in this section for additional information on the different connections.



Figure 4.1 Bulkhead Fittings Label Location



Bulkhead Fittings	
Fitting Label	Description
H2O WATER	Water supply connection.
CO2	Carbon dioxide supply connection (for standard configurations).
N2	Nitrogen supply connection (for nitrogen configurations).
MAIN GAS	Connection for gas driving pumps, active charge system, and pneumatic faceplate (where applicable) on universal and multi-gas configurations. Can be compressed air, CO <sub>2</sub> or N <sub>2</sub> .
GAS 1	Connection for gas being injected into product (for universal and multi-gas configurations). Can be CO <sub>2</sub> or N <sub>2</sub> . Gas 1 supplies both barrels unless Gas 2 also exists.
GAS 2	Connection for gas being injected into product (for universal and multi-gas configurations). Can be CO <sub>2</sub> or N <sub>2</sub> . Gas 2 serves barrel 2 if present.
SYRUP RIGHT SYRUP LEFT SYR X*	Base syrup connection. The base flavor syrup in a given barrel. When SYRUP LEFT is used, it designates syrup for barrel 1. When SYRUP RIGHT is used, it designates syrup for barrel 2.
FLAV X*	Flavor shot connection. The flavor shot that will be mixed with a base syrup (on multi-flavor dispensers only).

\* "X" represents the barrel number for syrup (SYR) connections, and the flavor number for FLAV connections.

## 4.7 Connecting to Water Supply

Water pipe connections and fixtures directly connected to a potable water supply shall be sized, installed, and maintained in accordance with federal, state, and local codes.

Connect water line adapter to the bulkhead fitting labeled "WATER" or "H2O" on the back of the dispenser. The water supply line connected to the bulkhead fitting should be a minimum 3/8" ID or larger if required by local codes. Before installing, flush several gallons of water through a newly fabricated line to remove any debris. Installing a shutoff valve near the connection will be helpful when removing the dispenser.

**Do not turn on the water supply at this time.**

**Note:** According to the National Sanitation Foundation (NSF), an ASSE 1022 approved backflow prevention device must be installed on the water supply line before connecting to the dispenser. If needed, one can be purchased from FBD under part number 12-2272-0001. The backflow device must have a line connected to the vent that diverts any flow to a drain. Failure to divert flow can result in water overflow.



## 4.8 Connecting to Gas Supply

The gas supply may come from either an independent tank with a primary/secondary regulator or a bulk tank that supplies other equipment. If the supply is from a bulk tank, tee off the main line and install a wall-mounted secondary regulator set to 70 PSI (483 kPa). Fabricate a 3/8" ID line from the secondary regulator (independent tank or wall mount) to the rear of the dispenser and connect to the appropriate bulkhead fitting. This regulator should only supply gas to the frozen beverage dispenser (and base cart if applicable). Installing a shutoff valve near the connection is recommended. For dispensers with multiple gas connections, verify the correct gas is connected to the correct fitting. If the dispenser is on a base cart with the BIBs and syrup pumps inside, then install a tee in the supply gas line to feed the syrup pumps.

Do not turn on the gas supply at this time.

## 4.9 Connecting to Syrup Supply

For installations requiring syrup lines less than 50 ft (15 m) in length, use tubing with a minimum ID of 3/8". Run the syrup lines from the pumps to the rear of the dispenser and connect to the proper syrup or flavor fitting.

For installations requiring syrup lines over 50 ft (15 m) in length, use tubing with a minimum ID of 1/2". Using tubing of any smaller diameter will lead to pressure fluctuations and false sold-out errors. Furthermore, consider installing booster pumps on the supply lines. Increasing the regulated gas pressure on the syrup pumps (without exceeding the syrup pump's pressure rating) can also help maintain proper supply pressure at the dispenser.

In all situations, it is recommended to install a shutoff valve near the connection to the back of the dispenser to assist with servicing or removing the dispenser.

**Do not turn on the gas supply for the syrup pumps at this time.**



## 5. STARTING UP THE DISPENSER

### 5.1 Leak Check and Prime

1	Remove the side panels by loosening the two screws located at the bottom of the panel and then lifting off the frame.
2	Remove the drip tray by lifting up and pulling away, then remove access panel to expose the solution modules.
3	Connect the BIB connectors to the syrup BIBs.
4	Turn on the water and the gas supplies. Ensure both are flowing to the dispenser. <b>Note:</b> The water and syrup pumps will activate loudly until the lines are pressurized.
5	Thoroughly check for leaks at all connections.
6	Install a 1/4" ID tube on the sample port shown in <b>Figure 5.1</b> . Check that the water and syrup shutoffs are on (as shown in <b>Figure 5.2</b> ) and then open the sample valve and collect the water/syrup in a cup. Continue to prime until syrup flow has been established and all air has been removed from the lines. Discard the samples. Repeat for all barrels.

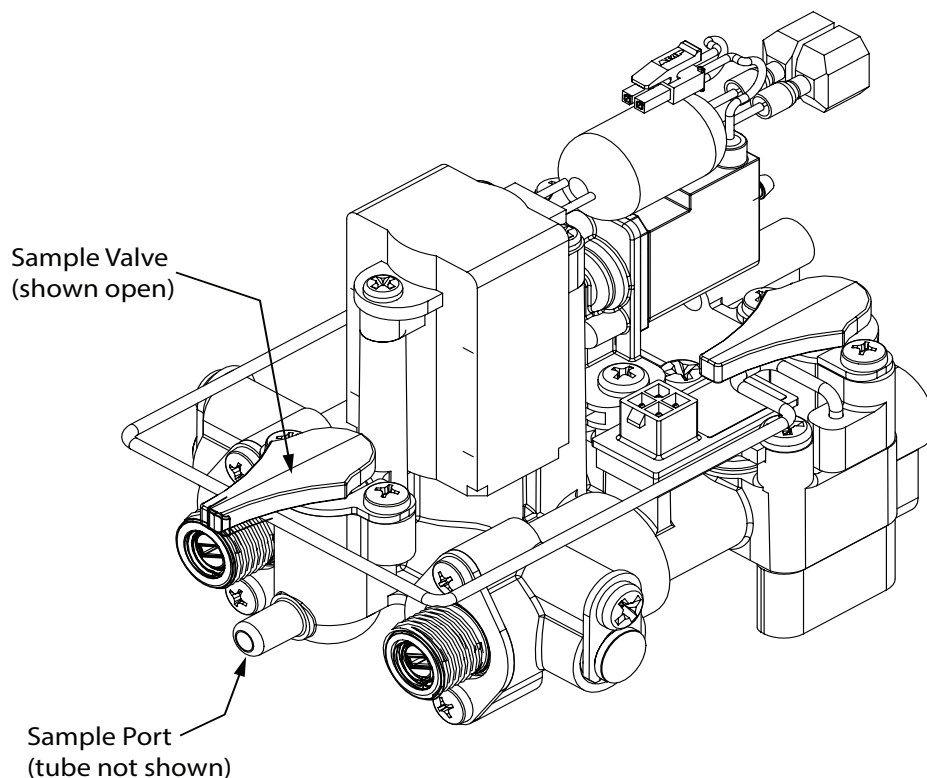


Figure 5.1 Sample Valve on Solution Module



## 5.2 Initial Power Up

Plug the dispenser into the power supply and verify the dispenser turns on by looking at the LCD located behind the merchandiser. Some models are equipped with an on/off switch; ensure the switch is in the ON position. The display should be on the home screen showing the status of the barrels (see **Section 7** for additional information on keypad buttons and how to navigate through menus). If the firmware has just been updated, then the dispenser will prompt the operator to answer the following questions:

1. Desired language.
2. Dispenser serial number.
3. Dynamic charge control.
4. Number of barrels.

After responding to the prompted questions, the home screen will be displayed.

Next, a few verifications will need to be made:

1	Press the green check button and then select the MENU option. Next, select the READOUTS option.
2	Press the COMMON button.
3	Verify the line voltage is at 230V $\pm$ 10%.
4	Verify the unregulated gas pressure (or "Main Gas" for universal and multi-gas configurations) is between 70 to 72 PSI (483 to 496 kPa) <sup>†</sup> and adjust the external or backroom regulator if needed.
5	Verify the water pressure is between 85 to 92 PSI (586 to 634 kPa) <sup>‡</sup> . This is not adjustable. <sup>‡</sup>
6	Verify the regulated gas pressure (or "Gas 1"/"Gas 2" for universal and multi-gas configurations) is approximately 60 PSI (414 kPa) and adjust the internal regulator(s) if needed. <sup>§</sup>
7	Press the BARREL button.
8	Verify the syrup pressures are between 70 to 72 PSI (483 and 496 kPa) and adjust the back room regulator if needed.
9	Dispense product from the sample valve after adjusting any pressures. This will restabilize to the new pressure.

For multi-flavor dispensers, the following will also need to be completed:

10	Press the FLAVOR button in the READOUTS menu.
11	Verify the syrup pressures for each of the flavors are between 70 and 72 PSI (483 and 496 kPa) and adjust the regulator if needed.

**Note:** The voltage drop on the LCD between idle and run modes must not exceed 10 volts between the power source and the machine. If it is greater than 10 volts then the power supply is inadequate and needs to be addressed by a certified electrician.

<sup>†</sup> Use the display pressure readouts when adjusting the settings.

<sup>‡</sup> The water pump output pressure should be 15 to 20 PSI (103 to 138 kPa) above the unregulated gas (or "Main Gas") pressure. See the troubleshooting section (**Section 10**) if the pressures are not correct.

<sup>§</sup> The dispenser will automatically compensate for fluctuations in regulated gas (or "Gas #1"/"Gas #2") from 50 to 70 PSI (345 to 483 kPa). Ensure that during setup the regulated gas is set as close to 60 PSI (414 kPa) as possible.



## 5.3 Water Flow Rate and Brix

The water flow rate and brix for each barrel must be verified and adjusted for optimal performance. Use the following procedure to adjust the water flow rate and set the brix for each barrel:

1	Turn the syrup shutoff valve to the OFF position ( <b>Figure 5.2</b> ).
2	Adjust the water flow rate to 1.5 oz/sec (44.4 ml/sec) by dispensing water from the solution module through the sample port for 10 seconds into a measuring cup. The amount measured should be 15 oz (444 ml). Turn the flow control clockwise to increase the flow and counterclockwise to reduce the flow. <b>Note:</b> The WATER AND BRIX CALIBRATION screen under the MAINTENANCE MENU can be used to help with timing.
3	Turn the syrup shutoff valve to the ON position and dispense a cup of fluid from the sample port to establish a stable flow.
4	Once a good water and syrup mixture is obtained, dispense a 16 oz sample and measure the sample brix with a refractometer. Be sure to thoroughly mix the sample first by pouring back and fourth between two cups.
5	Turn the syrup flow control counterclockwise to decrease the brix. Turn the syrup flow control clockwise to increase the brix.
6	Dispense and discard several samples after adjusting the brix.

For multi-flavor dispensers, the flavor injection modules will also need to be calibrated. Please refer to the Multi-Flavor Merchandiser Manual (24-M4MF-0001) for the calibration procedure.

The target brix for most sugar flavors is between 13.5 and 15. The target brix for most “light” flavors will be lower, usually between 9 and 10. Check the specifications for the flavors if unsure of the target brix

**Note:** Light or diet products have a low brix and can cause problems with the dispenser if not properly set up. Although these products contain ingredients that ensure the sugars freeze, they can still create excessive ice if not carefully brixed according to their specifications. Low brix issues will be associated with events such as audible ice scraping during freeze and low beater error problems.

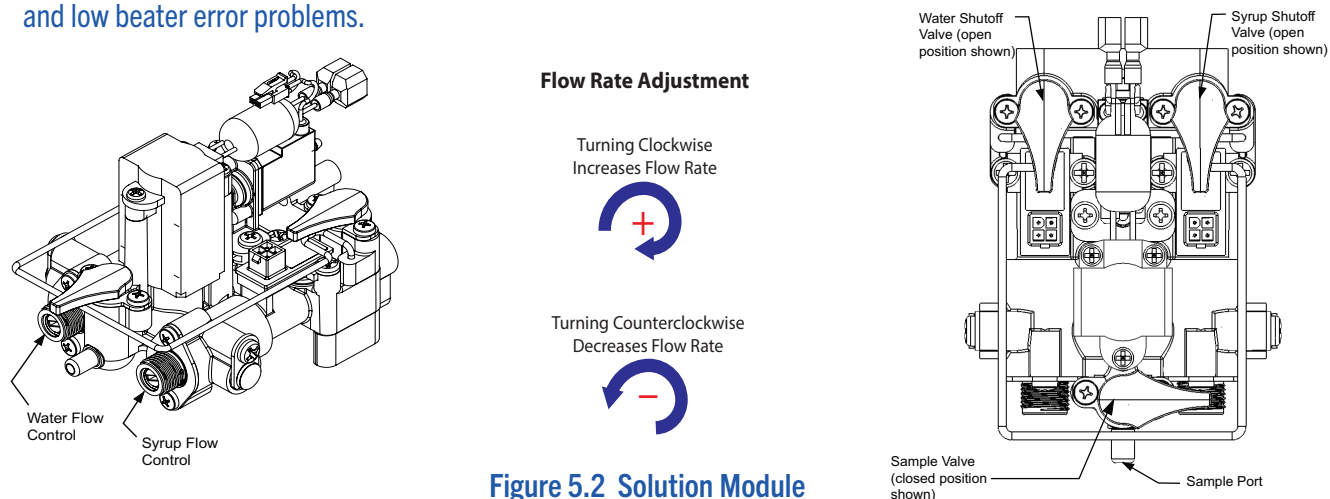


Figure 5.2 Solution Module





## 5.4 Filling Barrel and Starting

The barrel, or freeze chamber, must be purged of air before filling with product. Purge the air by activating the gas solenoid and then using the relief valve on the faceplate (**Figure 5.3**) to relieve air until all air has been displaced by gas.\* Failure to displace the air with gas will result in poor drink quality.

1	Navigate to the SERVICE MENU and then select the MAINTENANCE MENU. Go to the PURGE/FILL/DRAIN BARREL menu.
2	Highlight the desired barrel and then press the GAS PURGE button. Follow the prompts until the process has completed.
3	Press the FILL BARREL button to begin filling the product. Follow the prompts until the barrel is full (about 90% of the barrel) and then press the END button. Use the relief valve to relieve pressure in the barrel ( <b>Figure 5.3</b> ).
4	Once all barrels have been filled, return to the home menu.
5	Defrost the barrel(s) by pressing the green check mark button then selecting DEFROST. This will defrost the highlighted barrel and establish "baseline."
6	If you want to proceed to a freeze cycle right after the defrost cycle then press the green check mark button again and select ON.
7	When the LCD display shows READY, then the barrel is ready to be conditioned. Dispense several drinks until lighter color product begins forming in the faceplate.

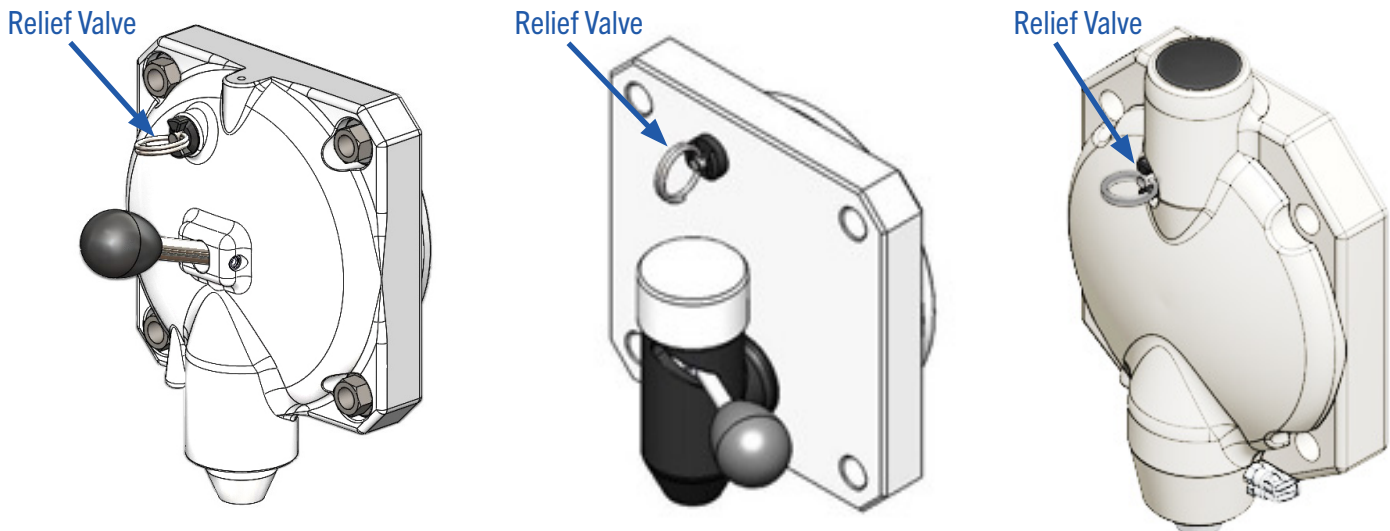


Figure 5.3 Relief Valve Location on Various Faceplate Types

\* Remember to deactivate gas solenoid upon completion.





## 6. DISPENSER OPERATION

### 6.1 Freeze

To freeze the product, press the up or down arrows on the keypad to select the desired barrel, then press the green check button and select ON. If the product is liquid, it will take 6 to 15 minutes per barrel (depending on temperature of product) to complete the initial freeze cycle. Dispense drinks until product near faceplate lightens in color indicating the barrel is properly conditioned.

### 6.2 Off

There are two options for turning off the dispenser. The first is to turn off one barrel at a time. To turn off individual barrels, highlight the desired barrel in the home menu, then press the green check button and select OFF. Alternatively all barrels can be stopped by pressing the red hand button to the left of the screen and then confirming with the green check button.

### 6.3 Defrost

To maintain optimal drink quality, the product in the barrel must be periodically defrosted because ice crystals grow in size over time and degrade the consistency and texture of the drink. The best drink quality is always right after defrost and refreeze. Naturally, it is ideal for the dispenser to be ready to serve drinks at all times, so a balance between defrost and up time must be maintained. During times of high volume dispensing, a barrel can go longer without defrosting while low volume periods should defrost every three to four hours.

Most dispensers are configured to execute automatic defrosts to maintain optimal product quality (please refer to **Sections 7.13** and **7.14** for directions on setting up defrost times). If a defrost is required outside automatic set times either for drink quality or service, a manual defrost can be completed by highlighting the desired barrel in the home menu and using the green check button to select DEFROST. It will take about eight to twelve minutes to defrost (depending on the activity of the other barrels). Unless the barrel is stopped prior to initiating defrost, it will remain ON and a freeze cycle will begin after the completion of defrost.

### 6.4 Drink Quality

Many factors can affect the quality of a frozen beverage such as time since last defrost, brand of syrup used, and the local water quality. There can even be drink quality differences between the various flavors within a given brand. Because of these factors, the dispenser drink quality settings are designed to be easily adjusted to compensate for these natural differences or even to adjust the drink quality for personal preferences.

There are two settings that can be adjusted for each barrel to change drink quality: the FREEZE ADJUSTMENT, which controls how frozen the drink is, and the EXPANSION ADJUSTMENT, which controls how much gas is injected into the product (refer to **Section 7.10** for information on adjusting these settings). Both of these adjustments are electronic settings; therefore, no tools are required to make an adjustment. The type of adjustment will be determined based on the drink characteristic that needs to be changed. Please note that a barrel that has been idle for hours, such as overnight, will produce a wetter, heavier drink. It is best to dispense a few drinks to recondition the barrel. Consider the condition of the product in the barrel before making a judgment on the drink quality.



### 6.4.1 Drink Too “Firm” or Cold

A drink that is over-frozen will tend to be very cold, below 22°F (-5.5°C), and can be considered hard and difficult to suck through a straw. It can also be lighter in weight than a properly frozen drink and tends to collapse in the cup after being dispensed. To raise the temperature of the drink, increase the setting found in the FREEZE ADJUSTMENT menu. It will take several compressor cycles before the product in the barrel has reconditioned to the new setting.

### 6.4.2 Drink Too “Sloppy” or Warm

A drink that is not frozen enough will tend to be above 27°F (-2.8°C) and will be considered “wet” or “loose” and may not stand up in the cup. It can also be heavier in weight than a properly frozen drink. To freeze the drink harder, lower the setting in the FREEZE ADJUSTMENT menu. It will take several compressor cycles before the product in the barrel has reconditioned to the new setting.

### 6.4.3 Drink Too Heavy

A drink with not enough gas will be heavy and may look dark in the barrel. To increase the gas content in the drink, increase the setting in the EXPANSION ADJUSTMENT menu. Approximately ten 16 oz drinks will need to be dispensed before the product in the barrel has reconditioned to the new setting.

### 6.4.4 Drink Too Light


A drink with too much gas will be very light and may even collapse in the cup. To reduce the amount of gas in the drink, lower the setting in the EXPANSION ADJUSTMENT menu. Approximately ten 16 oz drinks will need to be dispensed before the product in the barrel has reconditioned to the new setting.



## 7. MENUS AND NAVIGATION

### 7.1 Keypad

The keypad is the user interface point and allows for control of the dispenser and navigation of the menus. Please review the keypad layout (**Figure 7.1**) to familiarize yourself with the interface.

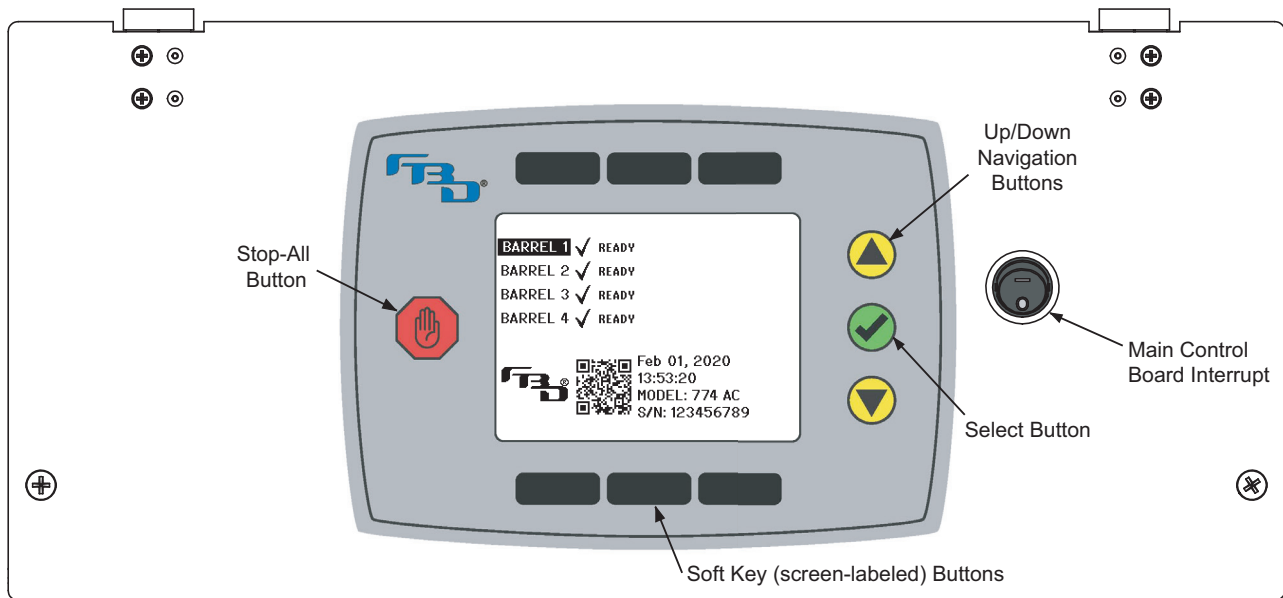

**Figure 7.1 Keypad**

- **Select Button (green):** This button confirms the current selection or action.
- **Stop All Button (red):** This button will turn off all barrels. A confirmation by the green select button is required.
- **Up/Down Arrow Buttons (yellow):** These buttons move the highlighted selection up and down. Press the select button to confirm the selection.
- **Soft Key (screen-labeled) Buttons (black):** These buttons change function depending on the menu currently being displayed. The function will be displayed below the top buttons and above the lower buttons.
- **Main Control Board Interrupt:** This switch controls power to the main control board. When OFF (○), the dispenser will remain powered, but the board will not. When ON (—), both the dispenser and board will be powered.

#### Screen Icon Legend

ICON	ACTION
	Returns the display to the home menu.
	Returns the display to the previous menu.
	Moves the selection cursor to the right.
	Moves the selection cursor to the left.



## 7.2 Home Menu

The home menu (**Figure 7.1**) shows the status of all barrels, allows control of all barrels and is the launching point to the submenus. Press the green button while a barrel is highlighted to perform actions to that barrel such as defrost or turn on/off. Pressing the green arrow will also allow access to the submenus. Messages may appear on the home screen from time to time depending on the current activity or error. For a complete listing of these messages, please refer to the “Home Menu Messages” section (**Section 10.1**).

## 7.3 Pop-Up Menu

The pop-up menu (**Figures 7.2 and 7.3**) allows the user to do the following:

- Start or stop the highlighted barrel.
- Defrost the highlighted barrel.
- Refill the highlighted barrel (use only when partially empty). Do not use this option to fill empty barrels, use the MAINTENANCE MENU instead.
- Perform a flavor change on the highlighted barrel.
- Proceed to the submenus.

The pop-up menu is accessed by pressing the green button when the home screen is displayed.

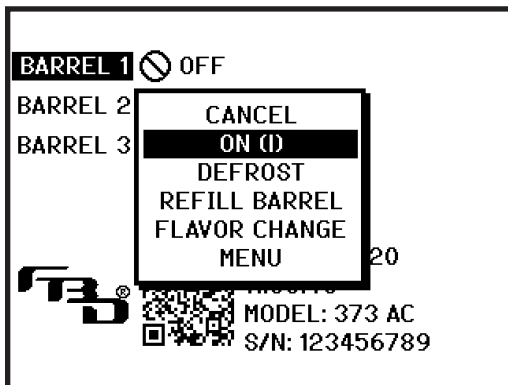


Figure 7.2


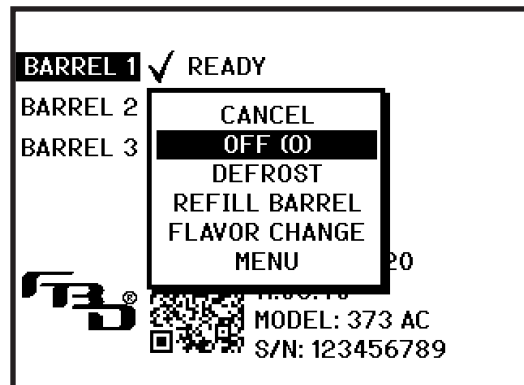


Figure 7.3



## 7.4 Menu Tree

The menu is divided up into two levels. The first level is the “store level” intended for the store operator. The second level is the “service level” intended only for trained service technicians. Below is a visual representation of the menu tree. For more information about each menu, see the descriptions that follow.

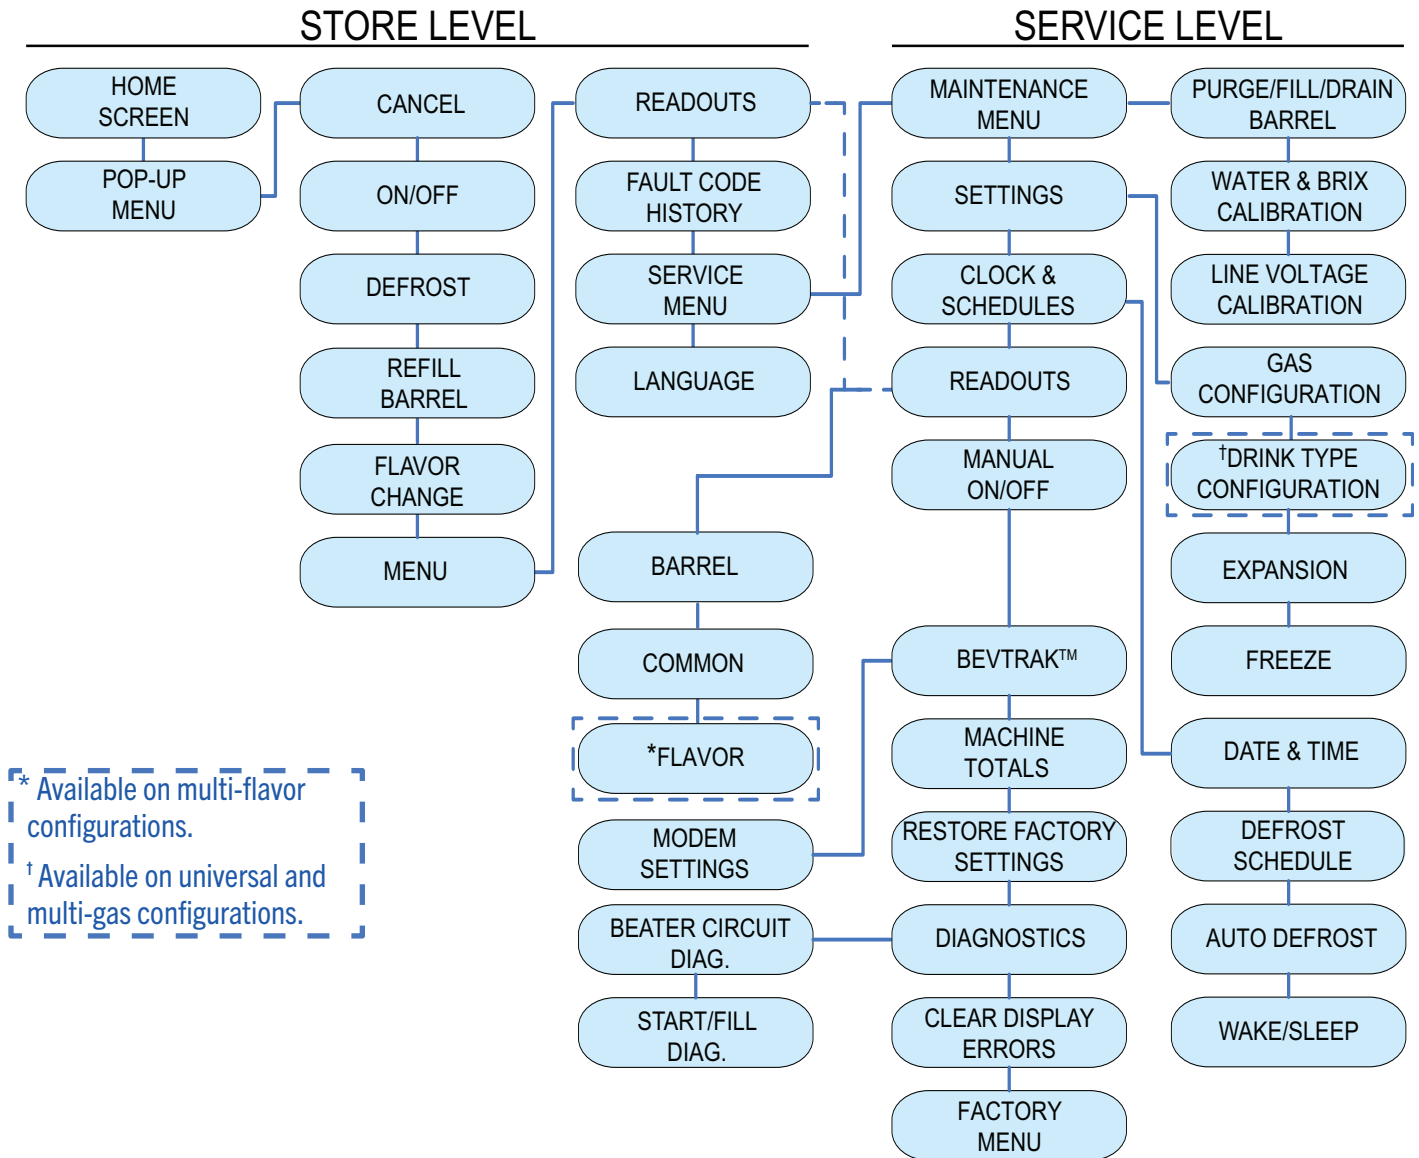

To access the SERVICE MENU, highlight SERVICE MENU while in the MAIN MENU and then simultaneously press the green select key and the bottom center soft key.



## 7.5 Main Menu

The main menu (Figure 7.4) allows the user to:

- View the readouts (pressures, temperatures, etc).
- Access the fault code history.
- Access the SERVICE MENU.
- Set a language.

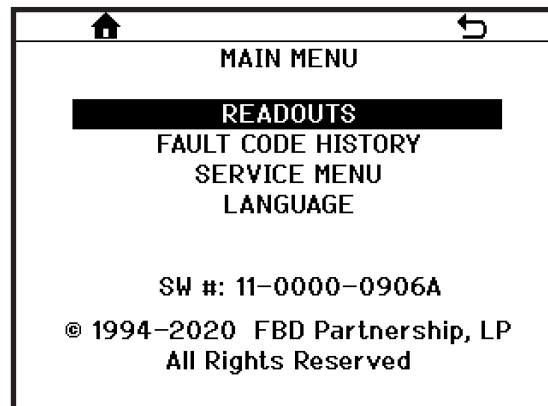


Figure 7.4

## 7.6 Readouts Menu

The READOUTS menu shows the current status of all temperature and pressure sensor readings, line voltage and other pertinent information about the operation of the dispenser. Some readouts are common to the dispenser and others are side, or barrel, specific. Press the BARREL or COMMON soft key button to switch between the two readouts (Figures 7.5 and 7.6). For multi-flavor dispensers, there will also be a third menu that shows the FLAVOR readouts (Figure 7.7).

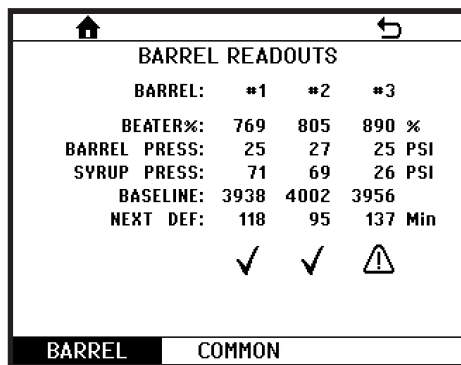


Figure 7.5

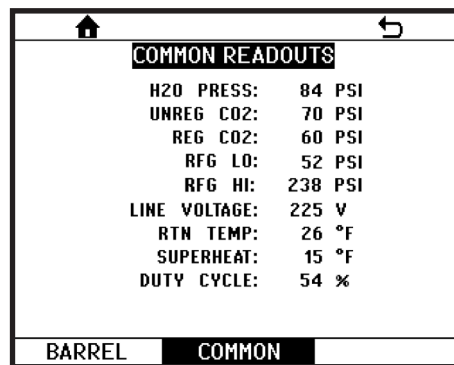


Figure 7.6

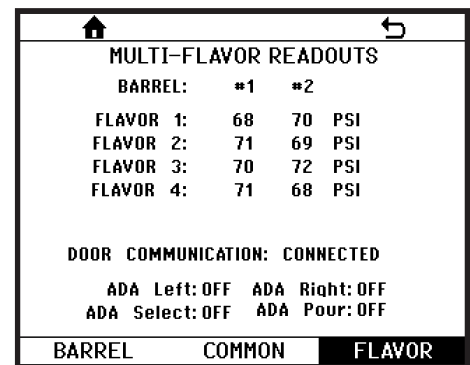


Figure 7.7



## 7.7 Fault Code History Menu

The FAULT CODE HISTORY menu provides a list of the last twenty fault codes with the date and time of occurrence and resolution (Figure 7.8). When the green button is pressed, additional details about the highlighted error are shown, including a QR code (Figure 7.9). Scan the QR code with a smart phone to see detailed troubleshooting steps. For a complete listing of fault codes that can be displayed, please see the “Fault Codes” section (Section 10.2).

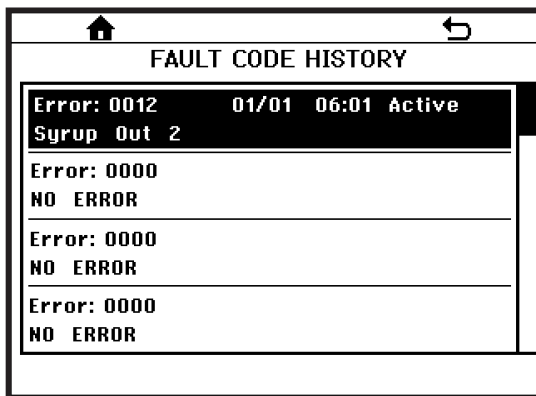


Figure 7.8

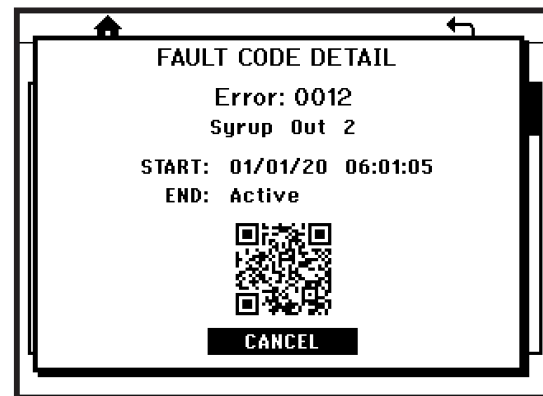


Figure 7.9

## 7.8 Service Menu

The SERVICE MENU options (Figure 7.10) are intended for use by a trained service technician only. To access these submenus, select SERVICE MENU while in the MAIN MENU and then press the green check button and the bottom center soft key button (blank) simultaneously.

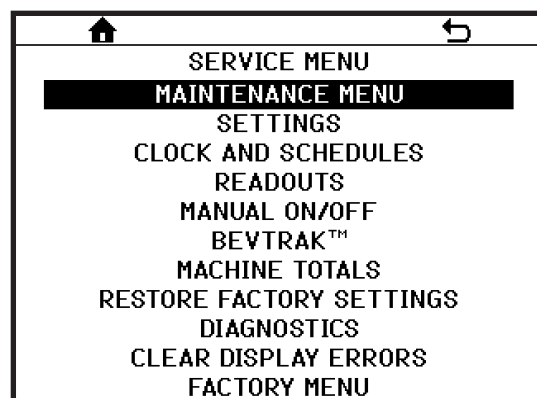


Figure 7.10



## 7.9 Maintenance Menu

The MAINTENANCE MENU has three sections to choose from (**Figure 7.11**): PURGE/FILL/DRAIN BARREL, WATER AND BRIX CALIBRATION, and LINE VOLTAGE CALIBRATION.

**PURGE/FILL/DRAIN BARREL** (**Figure 7.12**) – Provides three semi-automatic routines that eliminate the need to manually turn solenoids on and off. Follow the on-screen prompts to complete each process. All processes may be terminated at any time by pressing the END button.

- **GAS PURGE:** This procedure must be used after the faceplate has been removed and there is air in the barrel. It will purge the air from the barrel and replace it with gas. Use this process before filling the barrel. If the air is not replaced with gas, then the drink quality of the first few drinks from the barrel will be negatively affected. The process will fill the barrel with gas three times before automatically ending.
- **DRAIN BARREL:** This process will assist in draining liquid from a barrel (defrost first if needed). The user must terminate this process by pressing the END button once the barrel is empty.
- **FILL BARREL:** This process fills the barrel with product. The user must terminate this process by pressing the END button once the barrel is full.

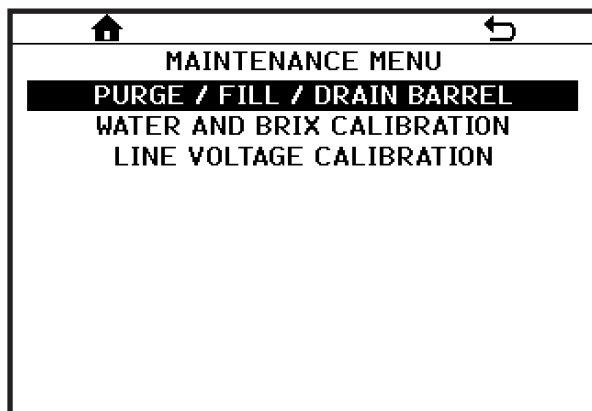


Figure 7.11

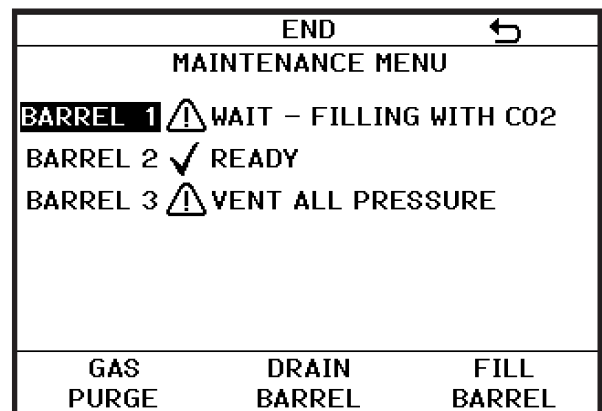


Figure 7.12





WATER AND BRIX CALIBRATION (Figure 7.13) – Provides a step-by-step process for calibrating the flow controls for the solution modules. Images and instructions are provided in each step.

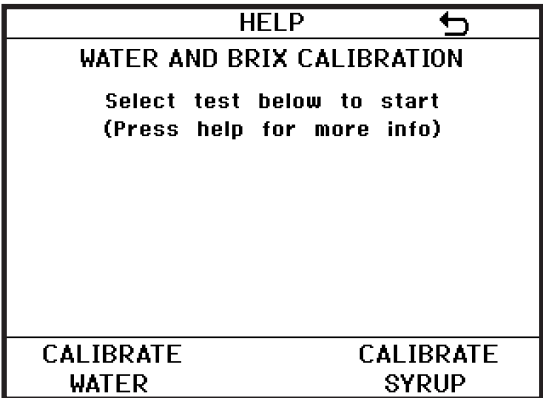


Figure 7.13

LINE VOLTAGE CALIBRATION (Figure 7.14) – Calculates the voltage offset. To use this function, first measure the line voltage on the contactor with a voltmeter, then enter that value into the menu. Once entered, the dispenser will calculate the voltage offset and correct the readout in the READOUTS menu.

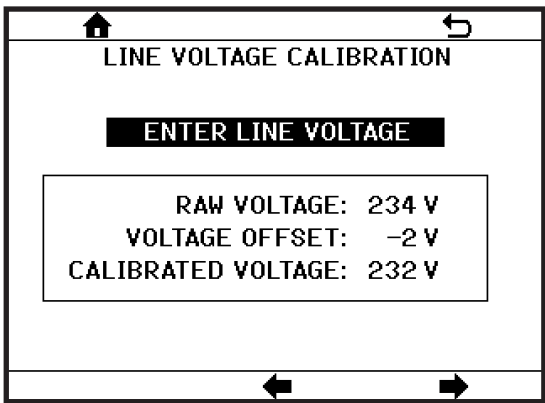


Figure 7.14



## 7.10 Settings Menu

The SETTINGS menu (Figures 7.15 and 7.16) provides dispenser information and access to some settings that are adjustable. Available settings options change based on dispenser software.

**SERIAL #:** Set the serial number of the dispenser (this is used for BevTrak™ reporting).

- **BARRELS:** Provides the number of barrels for the dispenser.
- **DISPLAY UNITS:** Set the units of measurement to IMPERIAL or METRIC.
- **ALARM:** Enabled sold-out audible alarm. Only dispensers ordered with the alarm option will have an alarm installed despite the presence of this setting in this menu.
- **REFRIGERANT:** Displays the refrigerant—R404-A or R448-A—the dispenser is using.
- **BEATER ALWAYS ON:** For dispensers with the energy savings option to turn off motors intermittently, this setting, if ENABLED, allows for beater motors to remain on at all times

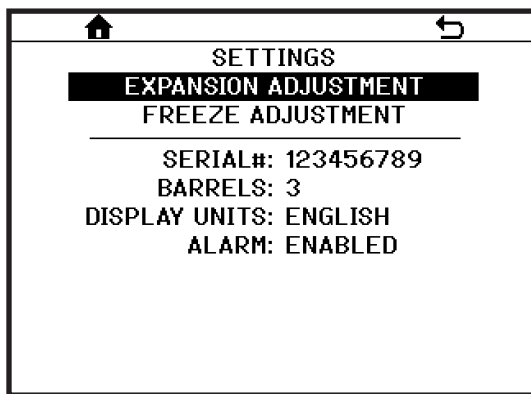


Figure 7.15

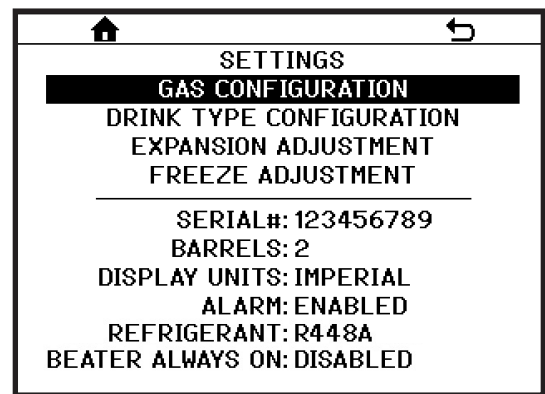


Figure 7.16

There are also four additional submenus that can be updated/set-up based on dispenser model to adjust different drink characteristics.


- **GAS CONFIGURATION:** Used to display and, based on dispenser model, select the gas that will be used in the dispenser (Figures 7.17, 7.18, and 7.19).
- **DRINK TYPE CONFIGURATION:** Used to configure the drink type (medium or high expansion) based on selected gas (Figure 7.20). Settings will only be available on dispensers with universal and multi-gas configurations.
- **EXPANSION ADJUSTMENT:** Used to adjust the amount of gas in a drink (Figure 7.21). The range of values is limited based on the configured gas and drink type.
- **FREEZE ADJUSTMENT:** Used to adjust how frozen the drink is (Figure 7.22).




## GAS CONFIGURATION:

- For standard dispensers with no multi-gas or multi-drink functionality (**Figure 7.17**) this is the gas (CO2 or NITROGEN; determined by dispenser configuration) that is injected into the barrels and that operates the water pump and active charge system.
- For 372 universal and multi-gas dispensers, this menu allows the user to set the gas used for MAIN GAS, GAS #1, and GAS #2 (**Figure 7.18**). The options for MAIN GAS are COMP AIR (compressed air), CO2, or NITROGEN. The options for GAS #1 and GAS #2 (372 MFLV dispensers only) are CO2 or NITROGEN. Ensure the correct gas is selected in this menu (**Figure 7.19**) to avoid issues with the drink profile. It is important that the correct gas be selected in order to set up the DRINK TYPE CONFIGURATION (**Figure 7.20**) correctly.


If the gas connections are being combined into one gas connection using adapter sets (sold separately), then the selected gas needs to be the same for the gas connections being combined.

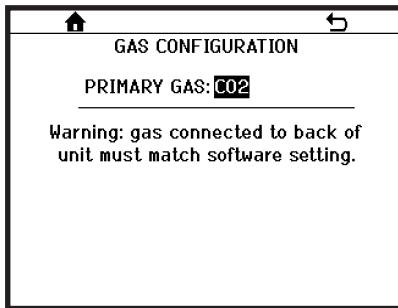

**Figure 7.17**

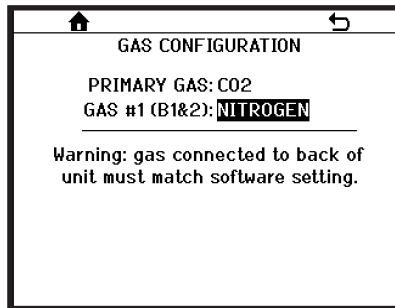


**Figure 7.18**

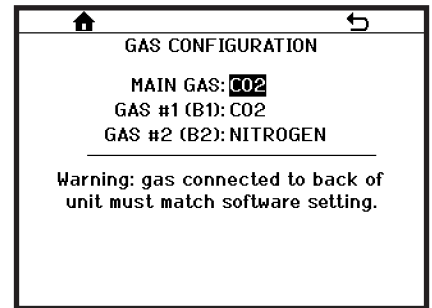

**Figure 7.19**

DRINK TYPE CONFIGURATION (**Figure 7.20**) - Once the gas type has been set under GAS CONFIGURATION, the drink type will need to be configured for universal and multi-gas configurations. Since the type of drink available for any given barrel is dependent on the gas that was selected for the barrel, it is very important to make sure the correct gas is selected. The available drink types will also vary by dispenser configuration as shown in the Universal and Multi-Gas Configuration Drink Types table.

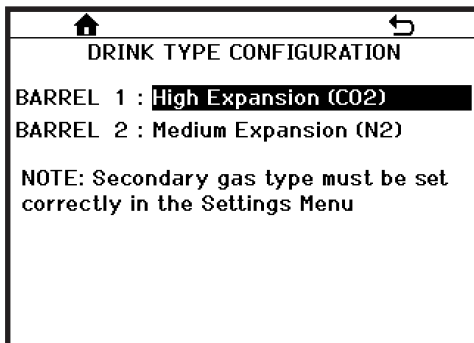

**Figure 7.20**

Universal and Multi-Gas Configuration Drink Types	
Dispenser	Available Drink Types
372 Standard Multi-Gas	CO2: High Expansion N2: Medium Expansion
372 Multi-Flavor Universal Gas	CO2: Medium Expansion and High Expansion N2: Medium Expansion



**EXPANSION ADJUSTMENT (Figure 7.21)** - The amount of gas in the drink can be adjusted in this menu. The adjustment ranges from “MAX” (high levels of gas, high expansion) to “LESS” (lower levels of gas, low expansion). Select the barrel number and adjust the bar graph up or down.

Approximately ten 16 oz drinks will need to be dispensed before the product in the barrel has reconditioned to the new settings.

**Note:** The range of values is limited based on the configured gas and drink type.

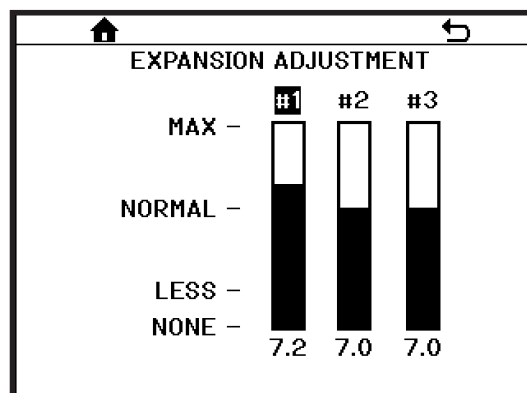


Figure 7.21

**FREEZE ADJUSTMENT (Figure 7.22)** - The adjustment allows the service agent to make the drink more liquid or more frozen.

**Note:** It will take several compressor cycles before the product in the barrel has reconditioned to the new settings.


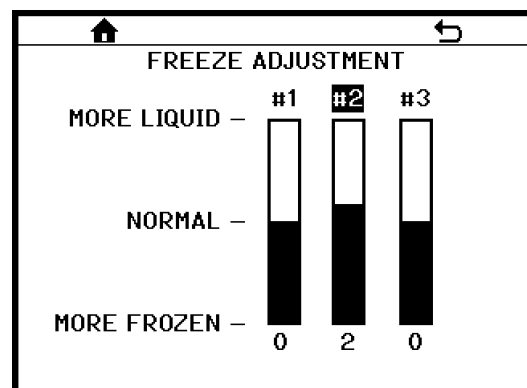


Figure 7.22



## 7.11 Clock and Schedule Menu

The CLOCK AND SCHEDULE menu contains various submenus shown in **Figure 7.23**.

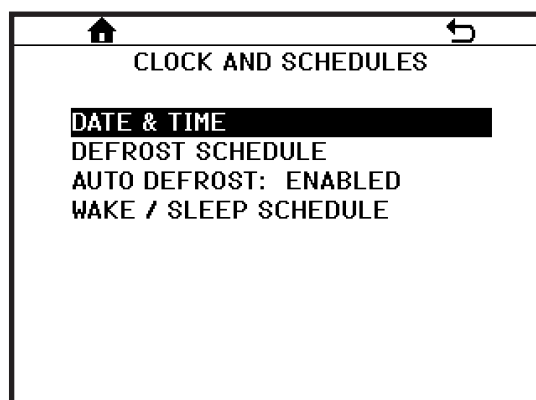


**Figure 7.23**

## 7.12 Date and Time Menu

The dispenser date and time is set in this menu. The time is in 24 hour format. The Daylight Saving Time (DST) feature can also be activated and the start and end dates are adjustable. Refer to your country's specific DST schedule to set the start and end dates.

For example: In the USA, DST begins the second Sunday in March and ends on the first Sunday in November. The example shown in **Figure 7.24** has been set according to this schedule.

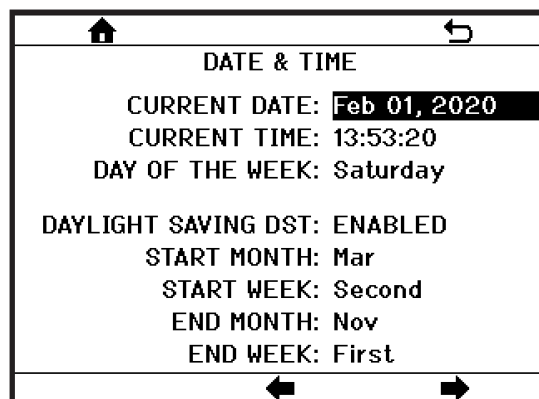

**Figure 7.24**



## 7.13 Defrost Schedule Menu

The DEFROST SCHEDULE menu (Figure 7.25) allows for easy adjustment of the defrost times for barrel #1 and then the delay time between barrels. For example, assume on a three-barrel dispenser, the delay time is set to 60 minutes and the first defrost is at 03:00. Barrel #1 will defrost at 03:00, barrel #2 will defrost at 04:00 and barrel #3 will defrost at 05:00. There can be up to eight defrosts per barrel per day. A time of 00:00 means no defrost is scheduled.

Each defrost time also has a day of the week setting. If the day of the week is capitalized then the dispenser will defrost at that time on that day. If the day of the week is in lowercase then the dispenser will skip that defrost time on that day.

There are also predefined defrost schedules available. Contact FBD for details on the various schedules.

DEFROST SCHEDULE

Offset each barrel by: 60 min

1.	00:14	s	M	t	W	t	F	s
2.	00:00	s	M	t	W	t	F	s
3.	00:00	s	M	t	W	t	F	s
4.	00:00	s	M	t	W	t	F	s
5.	00:00	s	M	t	W	t	F	s
6.	00:00	s	M	t	W	t	F	s
7.	00:00	s	M	t	W	t	F	s
8.	00:00	s	M	t	W	t	F	s

Load Predefined Schedule

Figure 7.25

## 7.14 Auto Defrost Menu

In addition to a preset defrost schedule, the dispenser has an automatic defrost feature (Figure 7.26). This allows the dispenser to dynamically adjust the time between defrost cycles based on customer activity.

When the auto defrost feature is enabled there are also “black out windows” that can be programmed. These windows prevent any defrost cycles from occurring during that period. Up to three windows can be specified and the start and end times for each window must be designated.

**Note:** A defrost schedule and auto defrost can be used simultaneously. Note, any time that the barrel is defrosted and then frozen, the auto-defrost timer is reset.

AUTO DEFROST

ENABLE AUTO DEFROST: ENABLED

DEFROST BLACKOUT WINDOWS

	START	END
TIME 1:	00:14	00:00
TIME 2:	00:00	00:00
TIME 3:	00:00	00:00

Figure 7.26



## 7.15 Wake/Sleep Schedule Menu

The wake/sleep feature (Figure 7.27) makes the dispenser wake up and go to sleep automatically. This feature is useful for locations that are closed overnight. The wake and sleep times can be different for each day of the week or common for all days.

WAKE / SLEEP SCHEDULE		
	Wake	Sleep
Every Day	00:00	00:00
Sunday	00:00	00:00
Monday	00:00	00:00
Tuesday	00:00	00:00
Wednesday	00:00	00:00
Thursday	00:00	00:00
Friday	00:00	00:00
Saturday	00:00	00:00

Figure 7.27

## 7.16 Manual On/Off Menu

The MANUAL ON/OFF (or MACHINE ON/OFF) menu (Figure 7.28) allows the service technician to turn on and off any solenoid, motor or status light in the dispenser. This is useful when purging the barrels or troubleshooting the dispenser.

**Note:** For protection, all solenoids will automatically turn off after 6 minutes.

For multi-flavor dispensers, there is also a MULTI-FLAVOR ON/OFF menu (Figure 7.29) to turn on and off the flavor solenoids.

MACHINE ON/OFF			
Beater Motor:	OFF	ON	OFF
Gas Sol:	OFF	OFF	OFF
Solution Sol:	ON	OFF	OFF
Defrost Sol:	OFF	OFF	OFF
Expansion Sol:	OFF	OFF	OFF
Sold Out:	OFF	OFF	OFF
COMPRESSOR:	ON		FAN: OFF
ALARM:	OFF		

Figure 7.28

MULTI-FLAVOR ON/OFF		
Barrel:	*1	*2
Flavor 1 Sol:	OFF	OFF
Flavor 2 Sol:	OFF	OFF
Flavor 3 Sol:	OFF	OFF
Flavor 4 Sol:	OFF	OFF
Dispense Sol:	OFF	OFF
COMMON		

Figure 7.29



## 7.17 BevTrak™ Menu

BevTrak™ is a reporting system for FBD beverage equipment. It allows the equipment owner to monitor the status and sales performance of their dispenser via an internet browser. BevTrak™ connects to the internet through Wi-Fi connections. If your dispenser comes with BevTrak™ capability the BEVTRAK™ menu (Figure 7.30) will show “Yes” for Enabled. If the serial number is not already entered in this menu, then it will need to be entered here to utilize this service. Also a Wi-Fi modem will need to be set up (refer to Section 7.18) and a customer login portal will need to be created on the BevTrak™ website ([www.bevtrak.com](http://www.bevtrak.com)). Contact FBD sales for assistance in setting up an account.

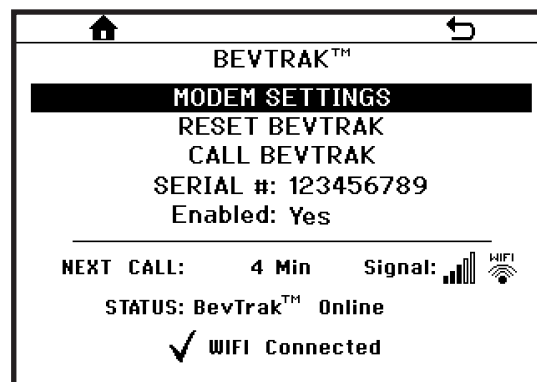


Figure 7.30

## 7.18 Modem Settings Menu

In order to use BevTrak™, the modem needs to be configured. To configure the modem, from the MODEM SETTINGS menu (Figure 7.31), select CONFIGURE WIFI. This will open a WIFI SETUP MENU (Figure 7.32) that will allow you to select from existing networks in the area or allow you to manually enter the needed network. Once the network is selected, a second WIFI SETUP MENU window will open (Figure 7.33) that will allow you to enter the password to the selected network. To finalize setup, select PRESS TO COMPLETE SETUP.

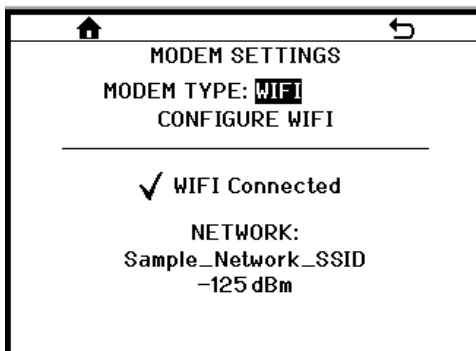


Figure 7.31

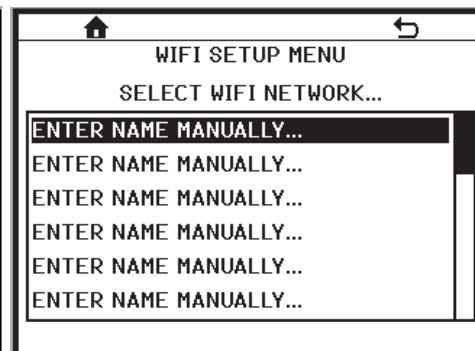


Figure 7.32

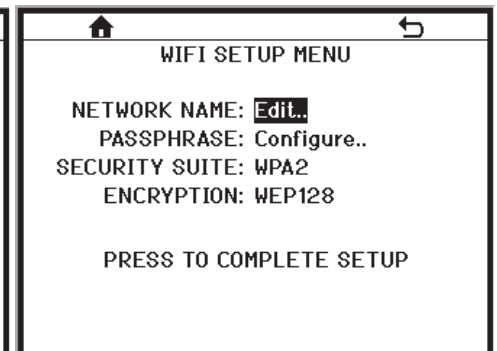


Figure 7.33





## 7.19 Machine Totals Menu

The MACHINE TOTALS menu (Figure 7.34) provides various totals that the dispenser records such as the number of compressor cycles or operating time for various components. This information can be useful when evaluating the throughput or diagnosing problems with the dispenser.

MACHINE TOTALS			
BARREL:	#1	#2	#3
DEFROST:	2,365	2,355	2,061 Cyc
SOLDOUT:	435	435	285 Hrs
BEATER:	72	72	68 Hrs
RUN-ON:	69	69	66 Hrs
ERROR:	4	4	2 Hrs
SYRUP:	122	122	97 Min
COMPRESSOR HOURS:			18 Hrs
COMPRESSOR CYCLES:			472 Cyc.
POWER ON HOURS:			109 Hrs
SLEEP HOURS:			0 Hrs
RESET TOTALS			

Figure 7.34

## 7.20 Restore Factory Settings Menu

The RESTORE FACTORY SETTINGS menu (Figure 7.35) allows a service technician to restore the dispenser settings to factory default. This can be useful when too many settings have been changed and the dispenser is not operating at optimal conditions. When restoring factory settings, certain settings can be retained such as the defrost schedule, auto defrost blackout times, language and units (Imperial or Metric). Select which settings are to be retained before restoring the factory settings.

RESTORE FACTORY SETTINGS	
<b>RETAIN SETTINGS:</b>	
DEFROST SCHEDULE:	No
BLACKOUT TIMES:	No
LANGUAGE:	No
UNITS:	No
<b>LOAD FACTORY DEFAULTS</b>	

Figure 7.35



## 7.21 Diagnostics Menu

The DIAGNOSTICS MENU (Figure 7.36) is a powerful feature of the 37x dispensers. Any time a malfunction is suspected, the best option for the service technician is to first run the diagnostic sequence for the system involved. This can eliminate hours of guesswork and parts swapping.

There are two diagnostic sequences:

1. Beater Circuit: This sequence will help identify any component failures in the beater circuit system such as the beater motor and capacitors.
2. Fill Circuit: This sequence will help identify any component failures in the fill circuit system such as solution or gas solenoids or any leaks in the product delivery system.

To begin, determine what the possible issue with the dispenser may be. Select the appropriate diagnostic sequence. Initiate the sequence and let it perform its checks. You may be asked to perform some manual operations or answer questions to proceed with the process. If any errors are found, the display will note the error and provide an error code. Refer to the “Diagnostic Fault Codes” section (Section 10.3) to diagnose the cause of the error.

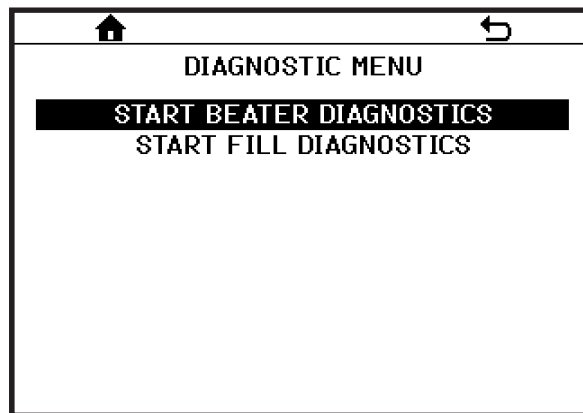


Figure 7.36



## 8. CLEANING AND SANITIZING

### 8.1 General Information

The dispensers are shipped from the factory cleaned and sanitized in accordance with NSF guidelines. After installation of the dispenser, the operator must provide continuous maintenance as described in this manual and always adhere to state and local codes to ensure proper operational and sanitation requirements are met. Failure to properly clean and sanitize the dispenser can negatively affect components, drink quality, and dispenser operation. FBD recommends that the dispenser be sanitized annually or when the dispenser has been non-operational for an extended period of time.

A few precautions when cleaning:

- To avoid contamination, **DO NOT** disconnect water lines during the cleaning and sanitizing process.
- **DO NOT** use strong bleaches or detergents when cleaning the exterior of the equipment. They will discolor and possibly corrode various materials.
- **DO NOT** use metal scrapers, sharp objects, steel wool, scouring pads, abrasives, solvents, etc., on the dispenser as they can damage the finish on various materials.

### 8.2 Daily Cleaning

A mild soap solution such as hand dishwashing detergent diluted with water at 90°F to 100°F (32°C to 38°C) should be used to clean the exterior of the equipment. Remove all product residues from the surfaces of the dispenser. Rinse thoroughly using clean water also at 90°F to 100°F (32°C to 38°C) to remove the remaining soap. Remove the drip tray (if not connected to drain plumbing) and cup rest to clean in a sink using a mild soap solution.

### 8.3 Sanitizing

The dispenser should be sanitized yearly. Prepare a chlorine solution containing 100 PPM of available chlorine with clean water at 90°F to 100°F (32°C to 38°C). Commercial beverage equipment sanitizing and cleaning solutions such as Kay-5 or Stera Sheen Green Label are preferred because they also contain surfactants to assist in cleaning. If using a commercial sanitizer/cleaner such as this then prepare according to their directions.

The following procedure must be followed for sanitizing the dispenser in accordance with NSF guidelines. The process describes the procedure for one barrel. Repeat for all barrels.

1	On the home screen press the up or down arrow until the barrel to be sanitized is highlighted. Press the green button and then select OFF. Press the green button again and select DEFROST.
2	While the barrel is defrosting, remove the drip tray (if not connected to drain plumbing), splash plate, and the cover located behind the splash plate.
3	Take an empty BIB and cut off the connector to make an adapter. Attach the BIB connector (adapter) to the connector on the syrup line - this will open up the syrup line connector and allow for cleaning solution to be pumped into the dispenser.



## 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

4	Once the barrel has defrosted, navigate to the MANUAL ON/OFF menu located in the SERVICE MENU section and activate both the gas and solution solenoids for the barrel to be sanitized.
5	Place a large container under the dispensing valve and drain the barrel. Activating the beater motor will facilitate draining the barrel when near empty. Deactivate the solution solenoid when the syrup lines have been purged. Continue purging the barrel and then deactivate the gas solenoid when the barrel has been emptied.
6	Turn off the water supply at the solution module using the shutoff valve.
7	Place the syrup BIB connector with adapter in the sanitizing solution.
8	Activate the solution solenoid and begin filling the barrel with sanitizing solution. Pull the relief valve as necessary to vent the pressure allowing the fill process to continue. Deactivate the solution solenoid when the barrel is 3/4 full.
9	Activate the beater motor and agitate for three minutes.
10	While the beater motor is agitating, dispense some sanitizing solution from both the relief valve and the sample valve to ensure they are both sanitized as well.
11	Remove the BIB connector from the sanitizing solution and reconnect to the syrup supply.
12	Activate the solution solenoid.
13	Place a large container under the dispensing valve and drain the barrel. Activating the beater motor will facilitate draining the barrel. Deactivate the solution solenoid when the syrup lines have been primed with syrup. Continue purging the barrel and then deactivate the gas solenoid when the barrel has been emptied.
14	Restore the water supply.
15	Activate the solution solenoid and beater motor again. When the barrel is 1/2 full, deactivate the solution solenoid to stop the fill process.
16	Activate the gas solenoid and drain the barrel. This step removes the remaining sanitizing solution left in the barrel. Deactivate the gas solenoid and beater motor when the barrel is empty.
17	Navigate to the MAINTENANCE MENU and start the FILL BARREL process. Follow the prompts until the barrel is full.
18	If any sanitizer off-taste remains, drain the barrel again and refill.

For multi-flavor dispensers, the process on sanitizing the syrup lines will need to be followed for both the base syrup lines and the flavor syrup lines. For the flavor syrup lines, make sure to manually activate each solenoid for the flavor syrup modules to run the cleaning fluid through the lines. Once the lines are sanitized, they will need to be attached to their syrup BIBs and the cleaning fluid purged until each line connected to the faceplate is full of syrup.



## 9. PREVENTIVE MAINTENANCE

An annual preventive maintenance schedule is recommended by FBD and should include the following steps:

A.	Check the Fault Code History in the menu ( <b>Section 7.7</b> ). If there are repeated beater low errors, inspect blades for damage (chips, cracks, warping, excessive wear) and dullness. The blade edge should be sharp and smooth. If damage or dullness is found, replace blades using an FBD blade/spring kit.
B.	Verify time, date, sleep, and defrost settings ( <b>Section 7.11</b> ). Adjust as necessary.
C.	Clean air filter ( <b>Section 9.1</b> ).
D.	Check all fittings and components for leaks. Repair if necessary.
E.	Check O-ring seals in dispenser valves for leakage and wear. Replace as necessary.  For dispensers using the stainless-steel DDV, the roll pin needs to be changed during the annual preventive maintenance. The SS DDV Minor Repair Kit (P/N 12-1140-0001) contains the roll pin and O-rings that are recommended to be replaced. If the internal metal components show signs of wear, the SS DDV Major Repair Kit (P/N 12-2307-0001) can be used to replace needed components. If the roll pin does not fit tightly with the handle lever, replace the handle (P/N 12-2864-0012).
F.	Replace the motor rear seals ( <b>Section 9.2</b> ).
G.	Sanitize according to manufacturer's recommended procedure ( <b>Section 8.3</b> ).
H.	Check water flow rate and brix ( <b>Section 5.3</b> ).

### 9.1 Air Filter Cleaning

The air filter must be cleaned monthly to ensure proper operation of the dispenser. A dirty air filter will reduce the refrigeration capacity and can potentially damage the compressor. To remove the filter, open the front merchandiser and locate the filter above the LCD display. Pull the air filter straight out to remove. Clean it with a mild dishwashing soap and water solution and dry thoroughly before reinstalling. A degreaser may be required if the filter is greasy.

**NOTE:** If the dispenser is located in a particularly dusty area or with airborne grease such as the cooking area of a fast food restaurant, then the filter should be cleaned every two weeks.



## 9.2 Rear Seal Replacement

The motor rear seals must be replaced annually. Failure to do so can result in rear seal leaks and potential motor failures. If the dispenser has been in storage for longer than 90 days, FBD recommends that the rear seals be replaced. The rear seal can be replaced from the front of the dispenser. The barrel must be drained and the faceplate removed to access the seal. The following process describes the procedure for one barrel. Repeat for all barrels.

1	On the home screen, press the up or down arrow until the barrel to be serviced is highlighted. Press the green button and then select OFF. Press the green button again and select DEFROST.
2	After the defrost cycle is complete, navigate to the MAINTENANCE MENU and start the DRAIN BARREL process. Follow the prompts until the barrel is empty and then end the process.
3	Vent the barrel of all pressure.
4	Remove the faceplate and beater bar. Be sure to catch the remaining liquid from the barrel when removing the faceplate.
5	With a small pick or corkscrew type seal puller, reach into the back of the barrel and remove the rear seal ( <b>Figure 9.1</b> ). Discard the used seal.
6	Lubricate the inner diameter on the new seal with Dow Corning 111 lubricant or any other NSF approved lubricant for food contact. <ul style="list-style-type: none"><li>• DO NOT lubricate the outer diameter of the seal.</li><li>• DO NOT use a hydrocarbon based lubricant as swelling and premature seal failure will occur.</li></ul>
7	Reinstall the seal with the "V" groove facing the product chamber. Ensure the rear seal is firmly seated by checking to make sure it is flush with the back of the barrel.
8	Reinstall the beater bar and faceplate. <b>Note:</b> FBD recommends sanitizing the barrel (see <b>Section 8.3</b> ) before filling.
9	Return to the MAINTENANCE MENU and start the GAS PURGE process followed by the FILL BARREL process.


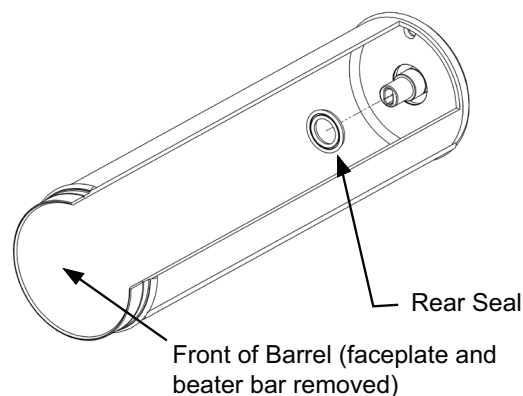


Figure 9.1 Rear Seal Placement



## 9.3 Backflow Preventer Maintenance

The strainer portion of the backflow preventer must be removed and cleaned on an annual basis. To clean the device, turn off the water supply and unscrew the filter housing (**Figure 9.2**). Clean any debris and replace the strainer. Turn the water supply back on when finished.

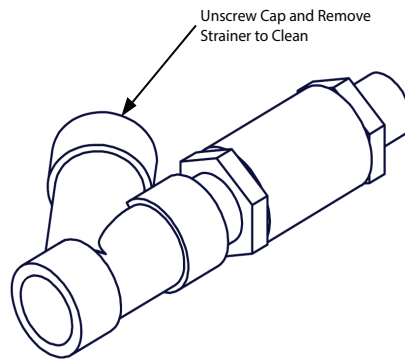

**Figure 9.2 Backflow Preventer**



## 10. TROUBLESHOOTING

### 10.1 Home Menu Messages

The dispenser will always display a message on the home screen with the status of the dispenser. These may be normal operation messages, depleted supply messages or error messages.

Message	Meaning	Action
AIR OUT	Dispenser not receiving compressed air.	Restore supply of compressed air. Dispenser will automatically restart.
CO2 OUT	CO2 supply depleted.	Restore CO2 supply. Dispenser will automatically restart.
DEFROST PAUSED	Defrost cycle was paused because another barrel required freezing.	No action required.
DEFROST REQUIRED	Motor baseline value is at factory default. Only occurs on new software installation.	Run defrost cycle.
DEFROSTING	Barrel is defrosting.	Wait for defrost cycle to complete.
FILL ERROR	A barrel is not filling with product correctly.	Run fill circuit diagnostic sequence.
FREEZING	Dispenser is in READY mode and product is being frozen.	No action required.
HIGH BARREL PRESSURE	The barrel pressure exceeds 55 PSI (379 kPa).	Dispense a drink to reduce barrel pressure.
MOTOR FAILURE	A beater motor is stalled.	Run the beater circuit diagnostic sequence.
NITROGEN OUT	Nitrogen supply depleted.	Restore nitrogen supply. Dispenser will automatically restart.
OFF	Barrel is turned off.	Select the ON option in the pop-up menu.
READY	Barrel is ready for serving.	Enjoy a frozen beverage.
SLEEPING	Dispenser is in sleep mode.	Wait until the normal wake time or restart each barrel by turning ON.
SYRUP OUT	The syrup pressure is below the syrup out threshold.	Check syrup BIB or pump. Replace BIB, if needed (barrel will restart automatically).
WAITING TO DEFROST	Barrel is waiting to begin the defrost cycle and must wait until another barrel freezes or completes a defrost.	No action required.

Table continued on next page.





Message	Meaning	Action
WAITING TO FREEZE	Barrel is ready to freeze but is waiting on other barrel(s) to complete defrost.	Wait until other barrel(s) have completed the defrost cycle.
WATER OUT	Water supply turned off.	Restore water supply. Dispenser will automatically restart.



## 10.2 Fault Codes

The dispenser records all errors, or faults, that occur. A history of these faults can be found in the **FAULT CODE HISTORY** menu located in the **SERVICE MENU**. Each error has a three-digit number associated with it. The first two digits are the error number and the third digit indicates the barrel number with the error. If the third digit is a 0 (zero) then the error is a common error to all barrels or it is a dispenser error.

### Error #011, 012, 013: Syrup Out

The syrup pressure is less than 45 PSI (310 kPa). For multi-flavor dispensers, this is the base syrup.

1	Replace the empty BIB.
2	Ensure the gas line is connected to the BIB pump.
3	Ensure the BIB pump is operating correctly.
4	Ensure the gas tank is not empty.
5	Ensure the syrup shutoff valve at the solution module is turned on.
6	Ensure any syrup shutoff valves at the back of the dispenser are not turned off.
7	Ensure the syrup supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.
8	Ensure the syrup pressure transducer is connected and working properly.

### Error #020: CO<sub>2</sub> Out

The CO<sub>2</sub> pressure is less than 45 PSI (310 kPa).

1	Replace or refill the CO <sub>2</sub> tank.
2	Ensure the CO <sub>2</sub> shutoff valve at the back of the dispenser is not turned off.
3	Ensure the CO <sub>2</sub> pressure transducer is connected and working properly.
4	Ensure the CO <sub>2</sub> supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.

### Error #030: Water Out

The water pressure is less than 45 PSI (310 kPa).

1	Ensure the water line to the dispenser is on and that the water shutoff at the solution module is turned on.
2	Ensure the gas supply line is connected to the water pump and that the pump is not stalled.
3	Ensure the gas supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.
4	Ensure the water pressure transducer is connected and working properly.

### Error #041, 042, 043: Tank PSI = 0

The tank pressure did not rise from 0 PSI (0 kPa) when filling.

1	Run the fill diagnostic sequence to determine the reason for the failure.
---	---



### Error #051, 052, 053: Safety Fill Error

A barrel filled continuously for more than two minutes.

1	Run the fill diagnostic sequence to determine the reason for the failure.
---	---

### Error #061, 062, 063: Beater Low Error

A beater motor stalled during operation.

1	Check the brix in the barrel. If low, check the brix at the sample valve and adjust if needed. Drain and refill the barrel.
2	Check the fault code history for multiple sold-out errors within a short period. This can mean that the BIB connector or syrup pump has a suction leak. Fix if necessary.
3	Run the beater circuit diagnostic if a component failure is suspected.

### Error #070: Compressor Ran Too Long

The compressor ran continuously for more than 90 minutes.

1	Check pressure reset switch (located near compressor inlet port).
2	Is the location an extreme volume venue such as a festival? If so, contact FBD service for instructions on adjusting the timer.
3	Check pressure reset switch then manually turn on the compressor using the menu and ensure the contactor located in the electrical box engages.
4	If contactor does not engage, check for 24 VAC at the contactor coil (the voltage will read ~19 VAC when not powered). Refer to the wiring schematic for details. If no voltage, install a new control board and check for 24 VAC again.
5	If 24 VAC is present at the contactor coil but it does not engage, then replace the contactor.
6	If contactor engages, check to make sure the voltage at contactor terminals T1 and T2 is above 187V when the compressor is starting. If below 187V, the line voltage supply needs to be corrected.
7	If voltage at T1 and T2 is good, substitute a "known to be good" run capacitor. If compressor starts, replace the original run capacitor.

### If compressor still won't start:

6	Remove the wires from the compressor and check for continuity between the C-R, C-S and R-S terminals of the compressor. If the compressor is hot, a lack of continuity can indicate a tripped thermal protector. It may take considerable time for the compressor to cool down and reset the protector. If continuity cannot be established through all motor windings when cooled down, the compressor should be replaced.
7	Check the compressor motor for a ground fault by conducting a continuity check between the common terminal (C) and the compressor shell. If there is continuity then replace the compressor.
8	Check the compressor motor windings for proper resistance. Contact FBD Technical Support for resistance values and further assistance. If the compressor has been recently running or has recently overheated, then the resistance readings will be higher. Wait until the compressor cools down (this may take over an hour) before using the resistance read out for any diagnostic purpose. If the cold resistance is out of spec, then replace the compressor.



**Error #081, 082, 083: High Barrel Pressure**

The pressure on a barrel exceeded 55 PSI (379 kPa).

1	Dispense a drink to reduce the barrel pressure. The dispenser will refreeze if set to the ON mode.
2	Run the fill diagnostic if a failed component is suspected.
3	Check the "Active Charge" regulator located on the product header to ensure it is set at 30 PSI (207 kPa). Use a tire gauge to check the pressure. All barrels should be fully depressurized before checking the active charge.

**Error #090: Hot Product Detected**

The system shut down because product in a barrel exceeds 90° F (32.2° C) for 200 seconds or 110° F (43.3° C) for 50 seconds depending on dispenser software.

1	Check the return temperature sensor for proper operation.
2	If hot product was detected, call FBD for technical assistance.

**Error #111, 112, 113: Motor Failure**

The beater motor is not operating.

1	Run a beater circuit diagnostic to determine the problem or refer to error #58X in this manual.
2	Check to make sure the beater motor is plugged in.

**Error #121, 122, 123: Beater High Error**

The control board is not reading the proper value from the beater motor.

1	Run a defrost cycle to reset the motor baseline value.
2	Run a beater circuit diagnostic to determine the problem or refer to error #58X in this manual.

**Error #130: Board Failure**

The control board is not functioning properly.

1	Cycle the power to the dispenser to see if it will clear the error.
2	Replace the control board.

**Error #140: Low Regulated CO<sub>2</sub> PSI**

The regulated CO<sub>2</sub> pressure dropped below 50 PSI (345 kPa).

1	Ensure the CO <sub>2</sub> supply is not low.
2	Check the "carbonation" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).



#### Error #150: High Regulated CO<sub>2</sub> PSI

The regulated CO<sub>2</sub> pressure is above 70 PSI (483 kPa).

1	Check the “carbonation” regulator on the header tray and ensure it is set to 60 PSI (414 kPa).
---	--

#### Error #160: Low Line Voltage

The voltage supply is below 200 volts.

1	Install a boost transformer or Automatic Voltage Regulator (AVR). Even if the voltage is slightly above 200V, a boost transformer or AVR may be needed as fluctuations in power during the day, or during dispenser operation may cause it to drop below 200 volts and shut down the dispenser. <b>Note:</b> For optimal performance and to avoid component failures, FBD recommends dispenser be supplied with 230 VAC $\pm$ 10%.
---	---

#### Error #170: High Line Voltage

The voltage supply is above 254 volts.

1	Install a buck transformer or Automatic Voltage Regulator (AVR). <b>Note:</b> For optimal performance and to avoid component failures, FBD recommends dispenser be supplied with 230 VAC $\pm$ 10%.
---	--

#### Error #180: LPSI Transducer

The low side refrigeration pressure is not reading correctly.

1	Ensure the pressure transducer is plugged in.
2	Replace the transducer if faulty.

#### Error #200: Return Temperature Sensor

The refrigeration return (suction) temperature sensor is not reading correctly.

1	Ensure the temperature sensor is plugged in.
2	Replace the sensor if faulty.

#### Error #270: Air Out

The compressed air pressure is less than 45 PSI (310 kPa).

1	Verify there is a supply of compressed air.
2	Ensure the compressed air shutoff valve at the back of the dispenser is not turned off.
3	Ensure the gas pressure transducer is connected and working properly.
4	Ensure the compressed air supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.



**Error #280: N<sub>2</sub> Out**

The N<sub>2</sub> pressure is less than 45 PSI (310 kPa).

1	Replace or refill the N <sub>2</sub> tank.
2	Ensure the N <sub>2</sub> shutoff valve at the back of the dispenser is not turned off.
3	Ensure the N <sub>2</sub> pressure transducer is connected and working properly.
4	Ensure the N <sub>2</sub> supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.

**Error #290: Gas #1 - CO<sub>2</sub> Out**

The CO<sub>2</sub> pressure is less than 45 PSI (310 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

1	Replace or refill the CO <sub>2</sub> tank.
2	Ensure the CO <sub>2</sub> shutoff valve at the back of the dispenser is not turned off.
3	Ensure the CO <sub>2</sub> pressure transducer is connected and working properly.
4	Ensure the CO <sub>2</sub> supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.

**Error #352: Flavor Out 1**

**Error #362: Flavor Out 2**

**Error #372: Flavor Out 3**

**Error #382: Flavor Out 4**

The pressure for flavor syrup is less than 45 PSI (310 kPa), where the “Out” number represent the flavor number.

1	Replace the empty BIB.
2	Ensure the gas line is connected to the BIB pump.
3	Ensure the BIB pump is operating correctly.
4	Ensure the gas tank is not empty.
5	Ensure any syrup shutoff valves at the back of the dispenser are not turned off.
6	Ensure the syrup supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.
7	Ensure the syrup pressure transducer for that flavor is connected and working properly.



#### **Error #390: No ADA Keypad Detected**

The ADA keypad is missing, disconnected or damaged.

1	Ensure ADA keypad has no visible damage.
2	Ensure the keypad connector is plugged in correctly. Make sure that the arrows on each connector align.
3	Replace the keypad if faulty.

#### **Error #400: ADA Keypad Shorted**

The ADA keypad button(s) are damaged or have been pressed longer than 12 seconds.

1	Ensure the ADA keypad is connected correctly. Make sure that the arrows on each connector align.
2	Replace the keypad if faulty.

#### **Error #410: Gas #1 - N<sub>2</sub> Out**

The nitrogen (N<sub>2</sub>) pressure is less than 45 PSI (310 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

#### **Error #420: Gas #2 - N<sub>2</sub> Out**

The nitrogen (N<sub>2</sub>) pressure is less than 45 PSI (310 kPa) for barrel 2.

1	Replace or refill the N <sub>2</sub> tank.
2	Ensure the N <sub>2</sub> shutoff valve at the back of the dispenser is not turned off.
3	Ensure the N <sub>2</sub> pressure transducer is connected and working properly.
4	Ensure the N <sub>2</sub> supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.

#### **Error #430: Gas #2 - CO<sub>2</sub> Out**

The CO<sub>2</sub> pressure is less than 45 PSI (310 kPa) for barrel 2.

1	Replace or refill the CO <sub>2</sub> tank.
2	Ensure the CO <sub>2</sub> shutoff valve at the back of the dispenser is not turned off.
3	Ensure the CO <sub>2</sub> pressure transducer is connected and working properly.
4	Ensure the CO <sub>2</sub> supply pressure at the dispenser is reading 70 PSI (483 kPa). Adjust the regulator if needed.

#### **Error #440: Gas #1 - Low Regulated CO<sub>2</sub> PSI**

The regulated CO<sub>2</sub> pressure dropped below 50 PSI (345 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

1	Ensure the CO <sub>2</sub> supply is not low.
2	Check the "Gas 1" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).



**Error #450: Gas #1 - High Regulated CO<sub>2</sub> PSI**

The regulated CO<sub>2</sub> pressure is above 70 PSI (483 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

1	Check the "Gas 1" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).
---	--

**Error #460: Gas #1 - Low Regulated N<sub>2</sub> PSI**

The regulated N<sub>2</sub> pressure dropped below 50 PSI (345 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

1	Ensure the N <sub>2</sub> supply is not low.
2	Check the "Gas 1" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).

**Error #470: Gas #1 - High Regulated N<sub>2</sub> PSI**

The regulated N<sub>2</sub> pressure is above 70 PSI (483 kPa) for barrels 1 and 2 (standard 372 multi-gas) and barrel 1 (372 multi-flavor, universal gas).

1	Check the "Gas 1" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).
---	--

**Error #480: Gas #2 - Low Regulated CO<sub>2</sub> PSI**

The regulated CO<sub>2</sub> pressure dropped below 50 PSI (345 kPa) for barrel 2.

1	Ensure the CO <sub>2</sub> supply is not low.
2	Check the "Gas 2" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).

**Error #490: Gas #2 - High Regulated CO<sub>2</sub> PSI**

The regulated CO<sub>2</sub> pressure is above 70 PSI (483 kPa) for barrel 2.

1	Check the "Gas 2" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).
---	--

**Error #1000: Gas #2 - Low Regulated N<sub>2</sub> PSI**

The regulated N<sub>2</sub> pressure dropped below 50 PSI (345 kPa) for barrel 2.

1	Ensure the N <sub>2</sub> supply is not low.
2	Check the "Gas 2" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).

**Error #1010: Gas #2 - High Regulated N<sub>2</sub> PSI**

The regulated N<sub>2</sub> pressure is above 70 PSI (483 kPa) for barrel 2.

1	Check the "Gas 2" regulator on the header tray and ensure it is set to 60 PSI (414 kPa).
---	--





## 10.3 Diagnostic Fault Codes

The following codes are faults that can be displayed after running a diagnostic sequence.

### Error #581, 582, 583: Beater Motor Not Turning On

1	Remove the control board and check for blown motor fuses (Motor 1: F3 & F4, Motor 2: F5 & F6, Motor 3: F7 & F8). A motor or capacitor malfunction may be caused by a blown fuse.
2	If fuses are OK, reinstall control board.
3	Disconnect wiring harness from suspect beater motor.
4	Manually turn on beater motor using the SERVICE MENU and ensure there is line voltage on pins 1 & 3 of supply harness (outside pins).
5	If correct voltage is present, substitute a "known to be good" capacitor and try to operate motor again. If no voltage is present (when activated through the menu), then replace the beater motor power harness.
6	If motor fails to start with working capacitor, then replace both motor and capacitor.

### Error #591, 592, 593: Gas Solenoid Not Opening

1	Disconnect the electrical harness from the gas solenoid for the barrel in question.
2	Manually activate the solenoid and check to make sure there is 12 VDC at the connection (the voltage will read ~2 VDC when not powered). If no voltage, then replace the control board.
3	If correct voltage is present, replace the solenoid. Be sure to turn off the gas supply before disconnecting the gas line from the solenoid.
4	If solenoid is functioning properly, then a leak may be present in the product delivery system. Check the relief valve, dispensing valve, rear seal and tubing in the product tray for leaks.
5	If no leaks are found, then the tank pressure transducer may be defective.

### Error #601, 602, 603: Solution Solenoid Not Opening

1	Disconnect the electrical harness from the suspect solution solenoid.
2	Manually activate the solenoid and check for 24 VAC at the connection (the voltage will read ~19 VAC when not powered). If no voltage, then replace the control board.
3	If correct voltage is present, remove the solution module and replace the solenoid.



**Error #611, 612, 613: Gas or Solution Leak**

The barrel pressure is rising during a fill circuit diagnostic test.

1	Determine if the barrel is filling with gas or liquid. If the barrel liquid level is low enough, use a flashlight to look at the back of the barrel and see if liquid is entering the barrel. Replace a leaking solenoid.
2	Ensure the solenoids are not manually turned on by going to the MANUAL ON/OFF menu. Check to see if either solenoid is receiving power by removing the leads and testing with a voltmeter. If 12 VDC is measured on the gas solenoid, or 24 VAC is measured on the solution solenoid, then replace the control board.

**Error #621, 622, 623: Barrel Leak**

The barrel pressure is dropping during a fill circuit diagnostic test.

1	Look for any obvious leaks by searching for liquid along the product line from the solution module to the back of the barrel.
2	Inspect the rear seal to determine if the leak is originating from it.
3	Inspect the relief valve in the faceplate to determine if the leak is originating from it. Press and turn the relief valve to firmly seat.
4	Inspect the dispensing nozzle to determine if the leak is originating from it.



## 11. DIAGRAMS AND SCHEMATICS

### 11.1 Mounting Templates

To permanently secure the dispenser to a countertop, use the provided mounting diagrams (Figures 11.1 and 11.2) to drill mounting holes into the countertop. Next, place the dispenser in position and install bolts from the underside of the countertop into the threaded bosses in the frame. Seal the dispenser to the countertop with a bead of clear silicone caulk around the base of the frame to prevent spills from collecting under the dispenser.

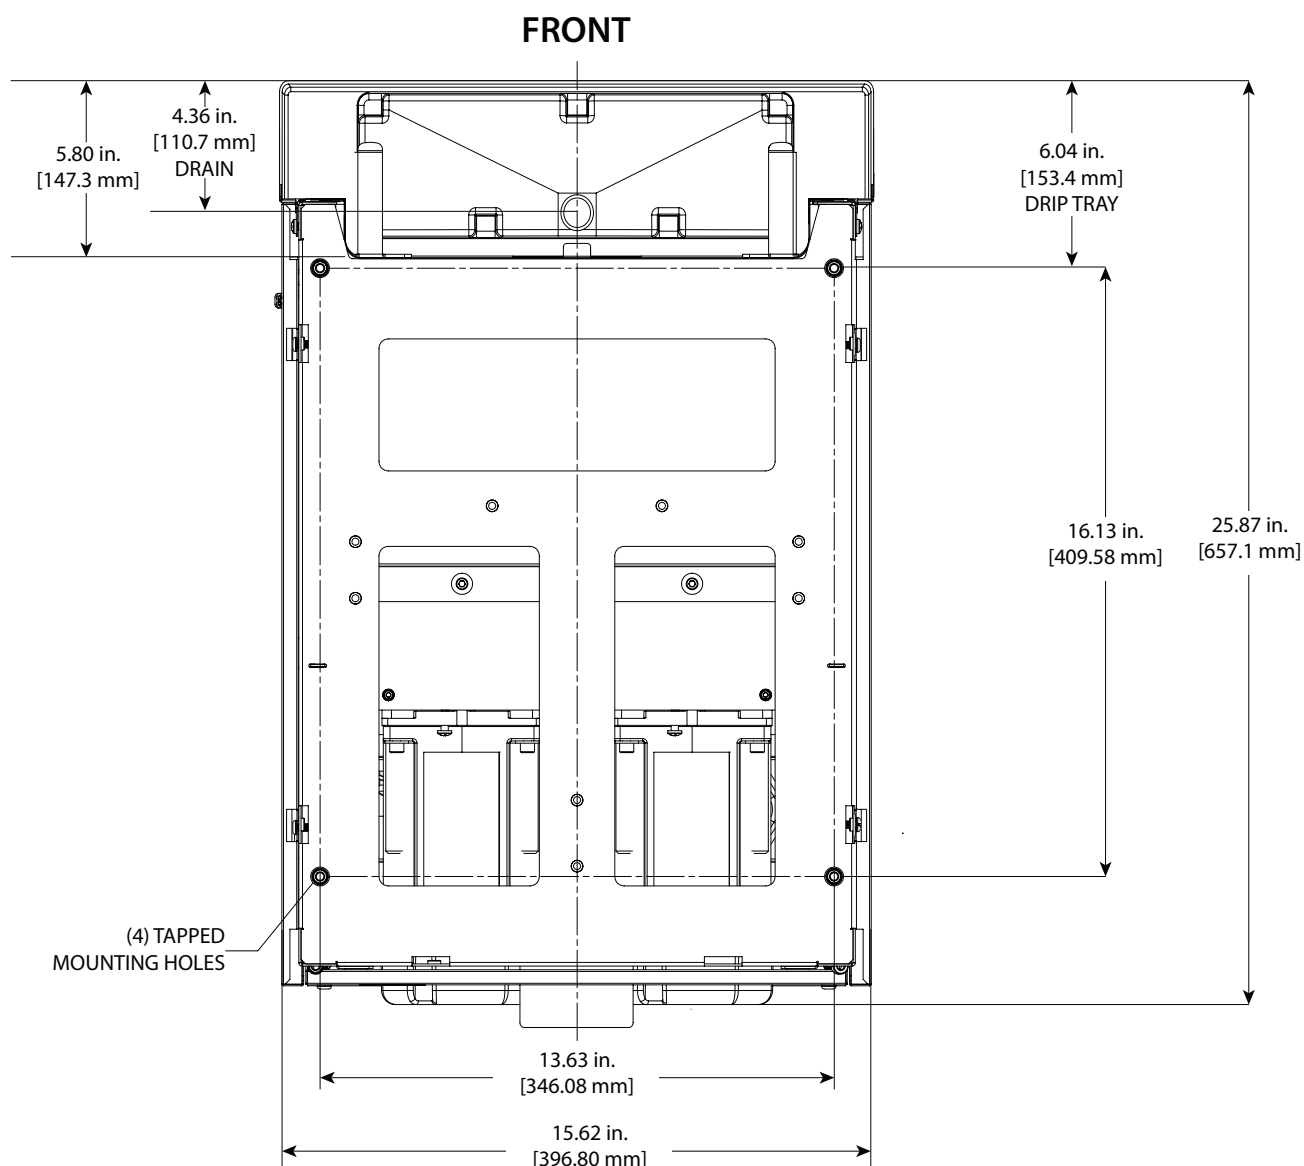


Figure 11.1 Mounting Diagram for 372 Dispenser



## 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

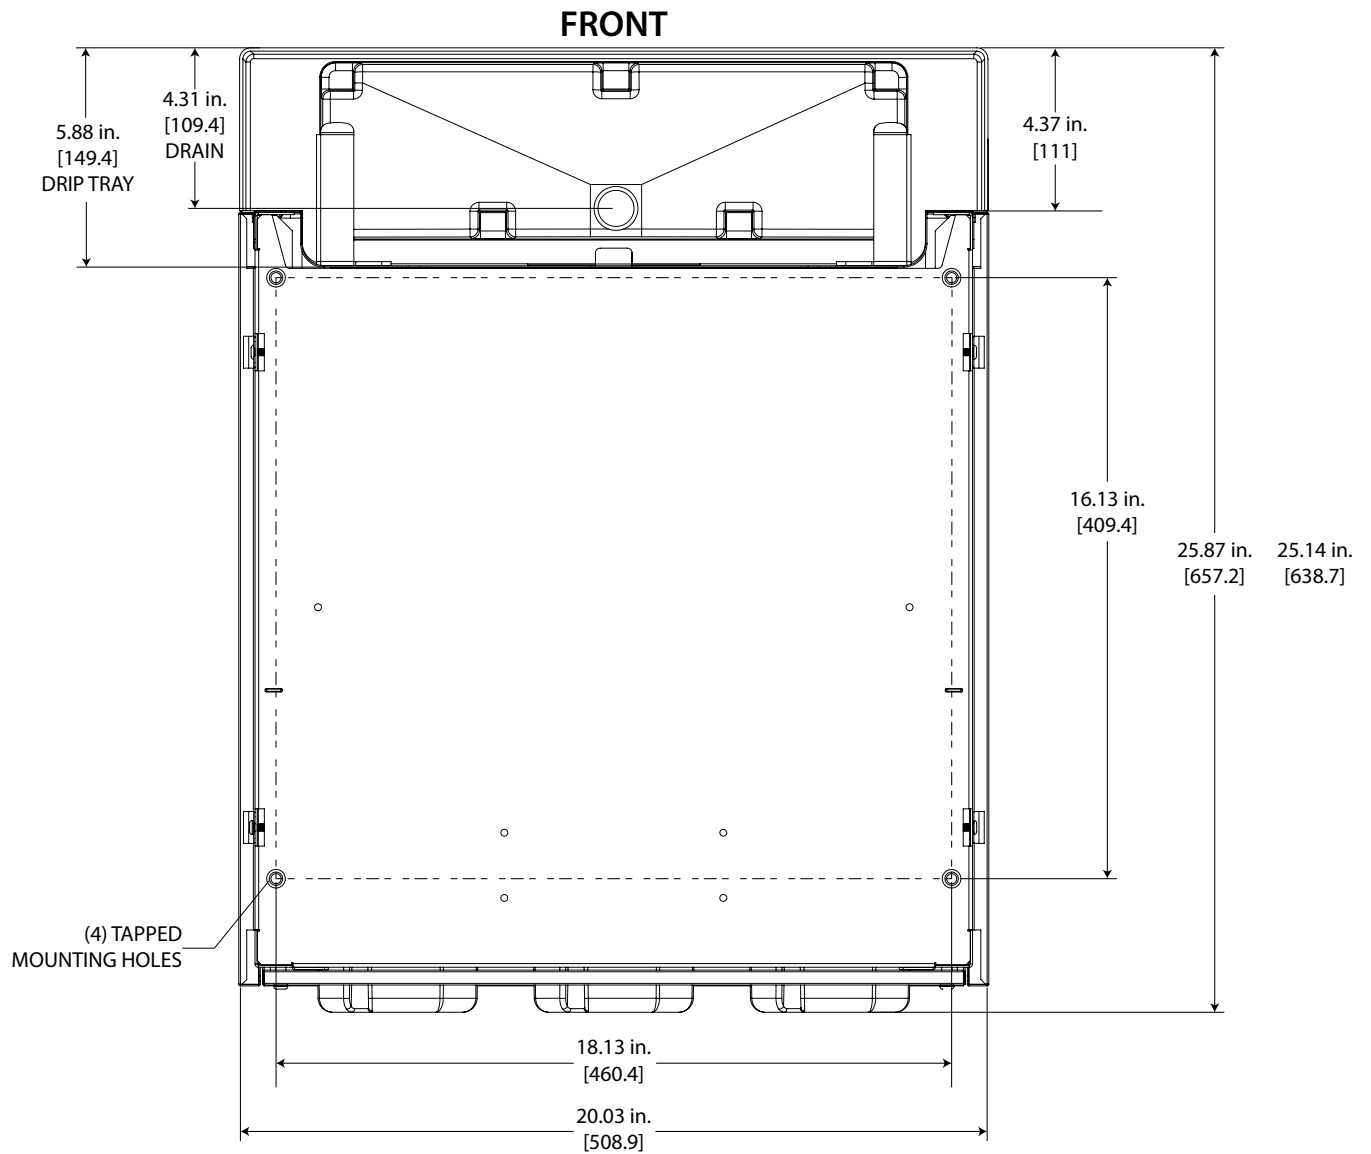


Figure 11.2 Mounting Diagram for 373 Dispenser



## 11.2 Flow Diagrams

Figure 11.4 shows the plumbing diagram for the standard 373 dispenser and is representative of the standard 372 dispenser with the exception of the number of barrels. Figure 11.5 shows the plumbing diagram for the 372 nitro dispenser, and Figure 11.6 shows the plumbing diagram for the 372 multi-flavor dispenser.

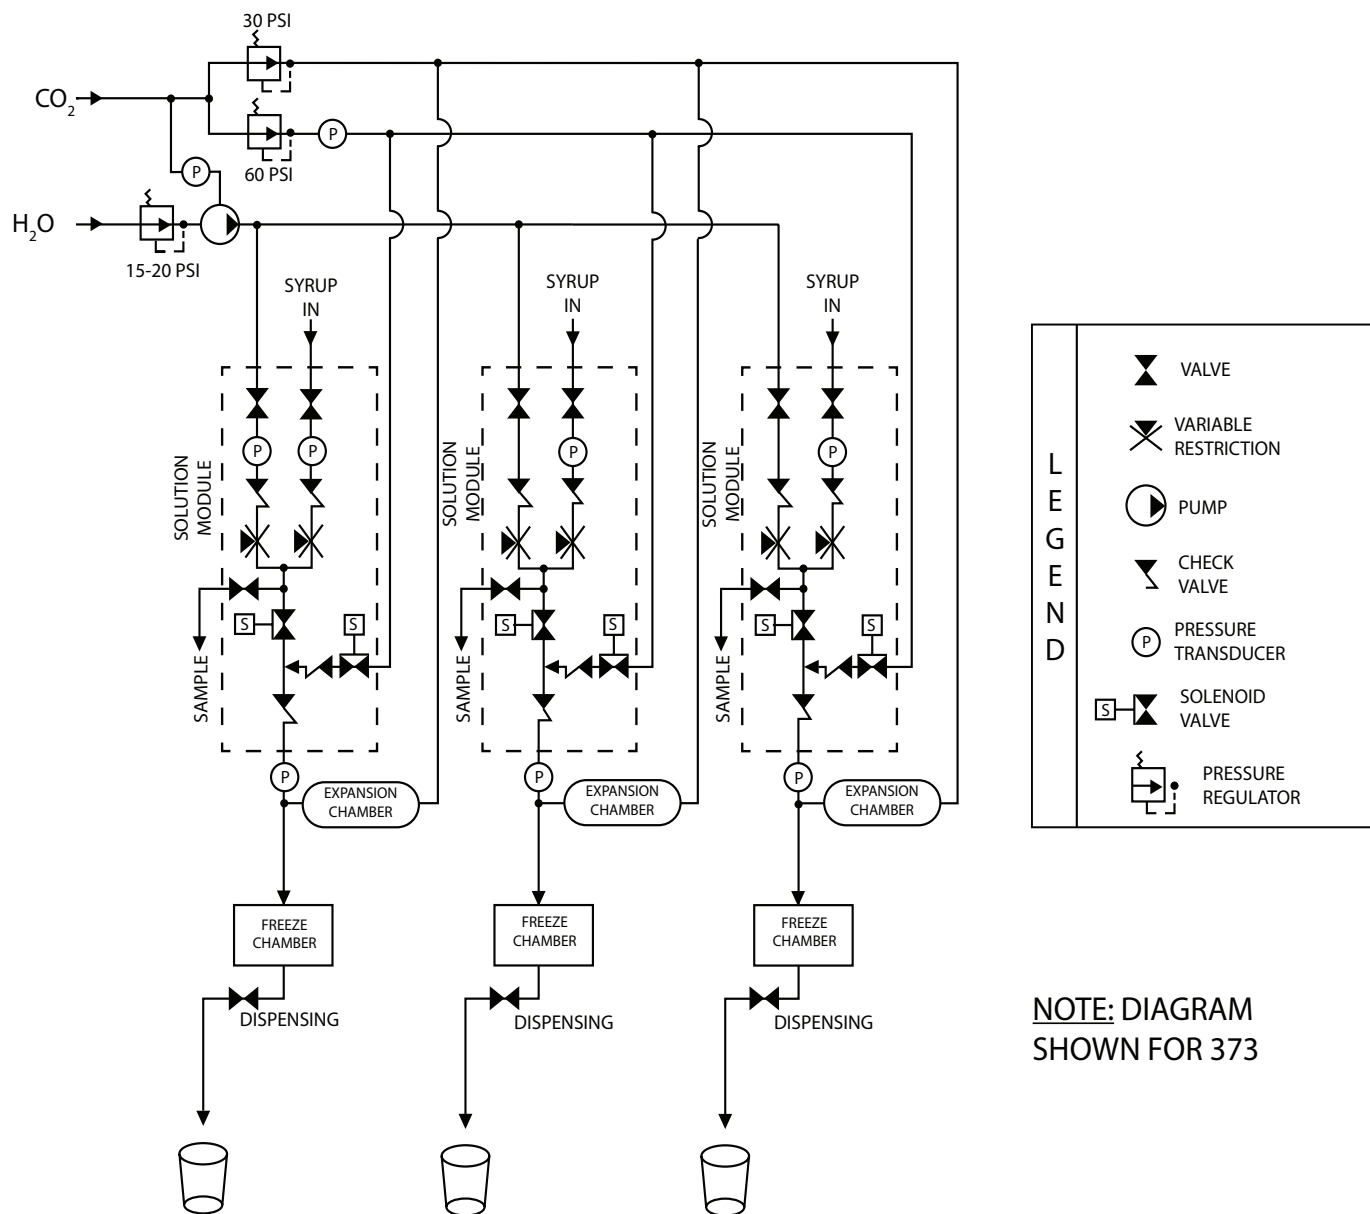


Figure 11.4 Flow Diagram for 372 and 373 Standard Dispensers

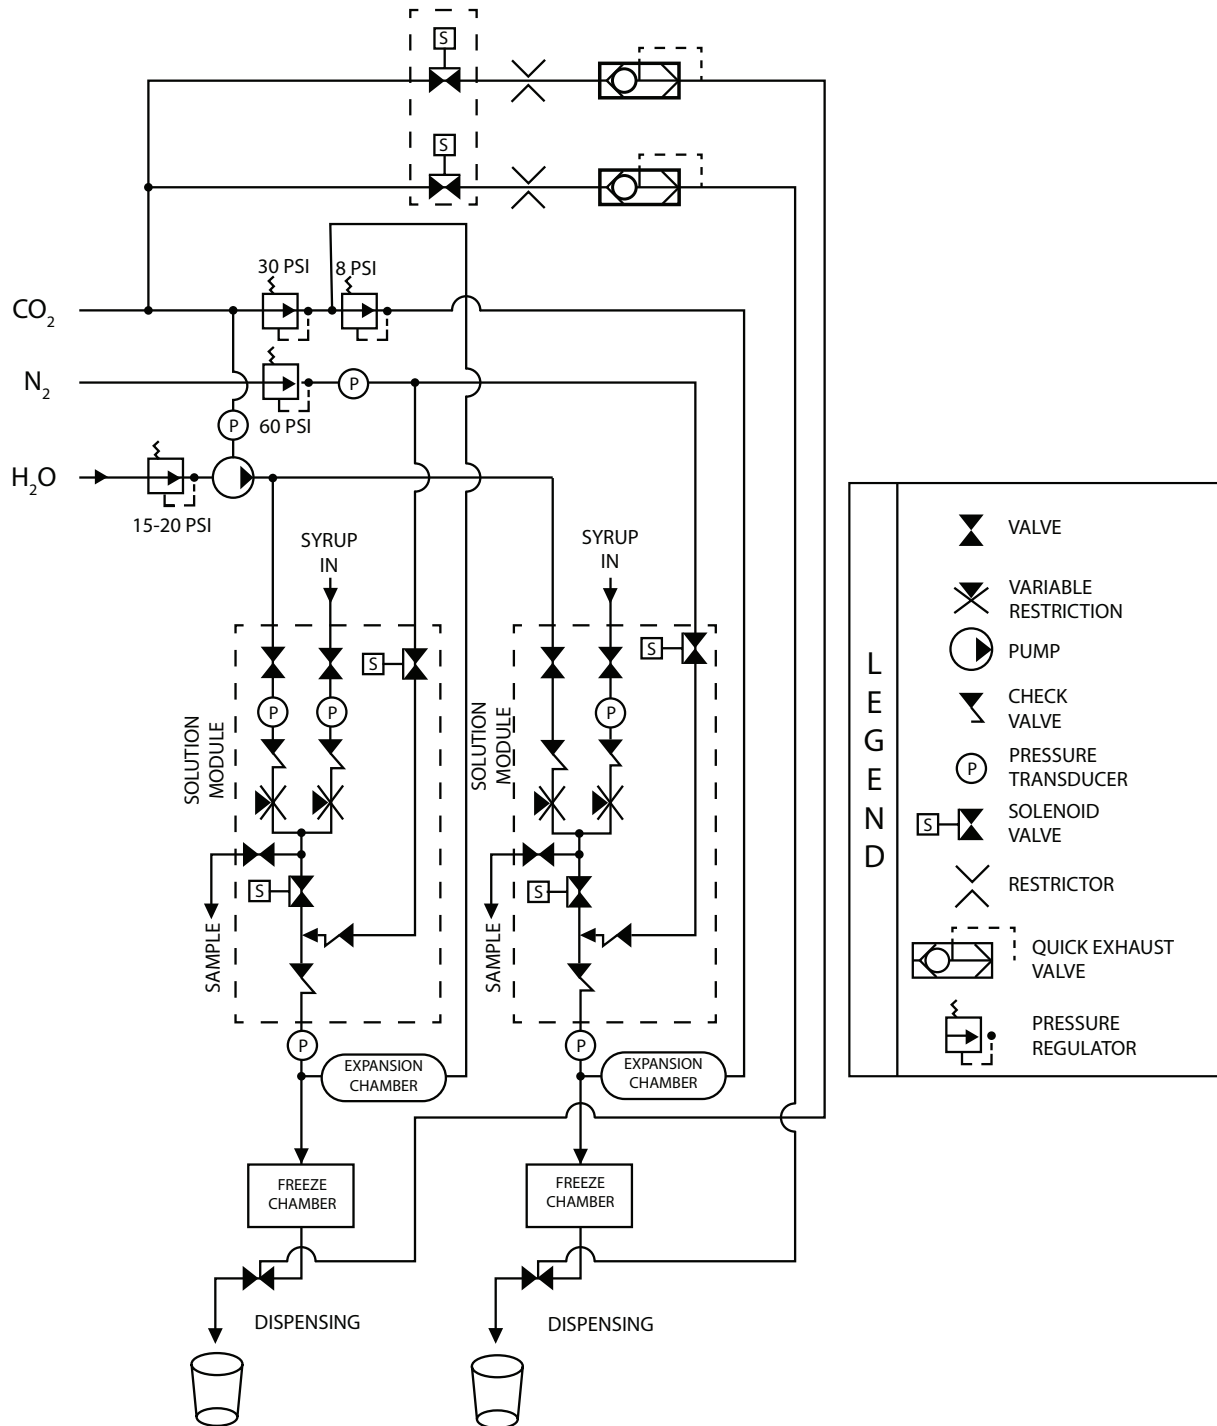


Figure 11.5 Flow Diagram for 372 Nitro Dispenser

# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

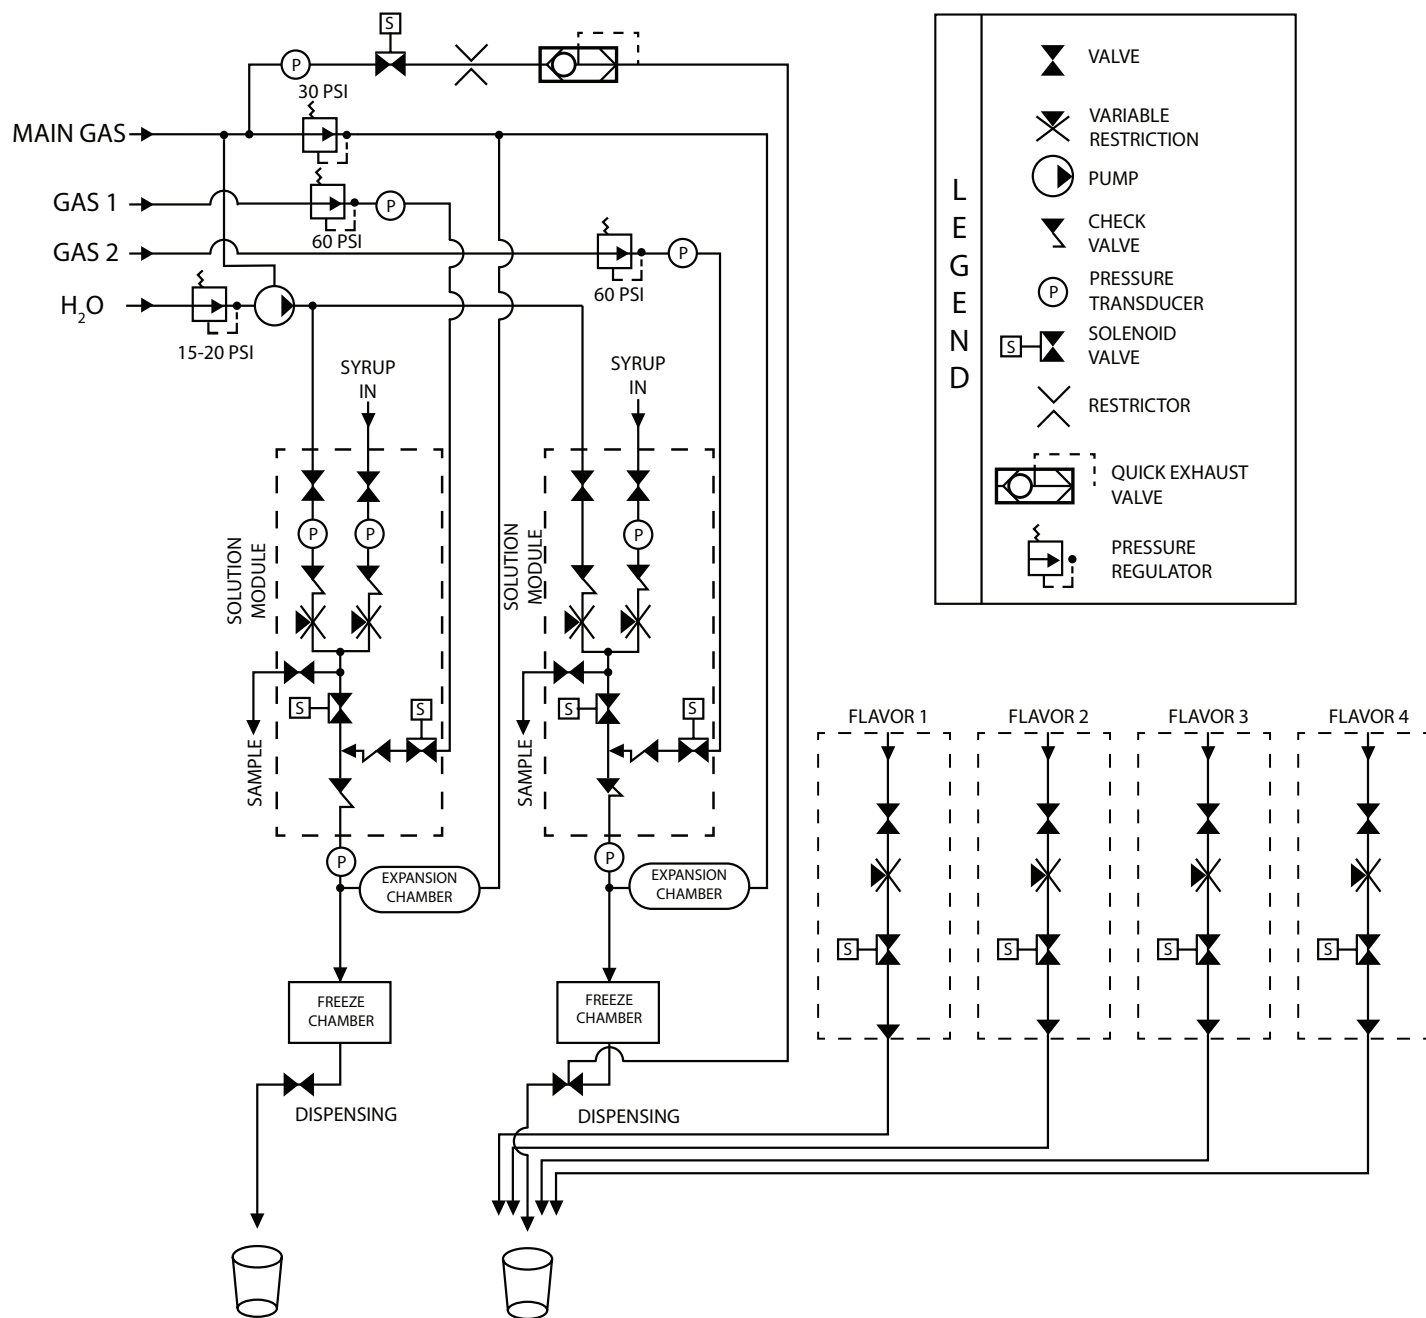


Figure 11.6 Flow Diagram for 372 Multi-Flavor Dispenser



# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

## 11.3 Electrical Wiring Diagrams

Figures 11.7 through 11.9 show the electrical wiring diagrams for the 372 and 373 standard dispenser and Figures 11.20 through 11.22 show the electrical wiring diagram for the 372 multi-flavor dispenser.

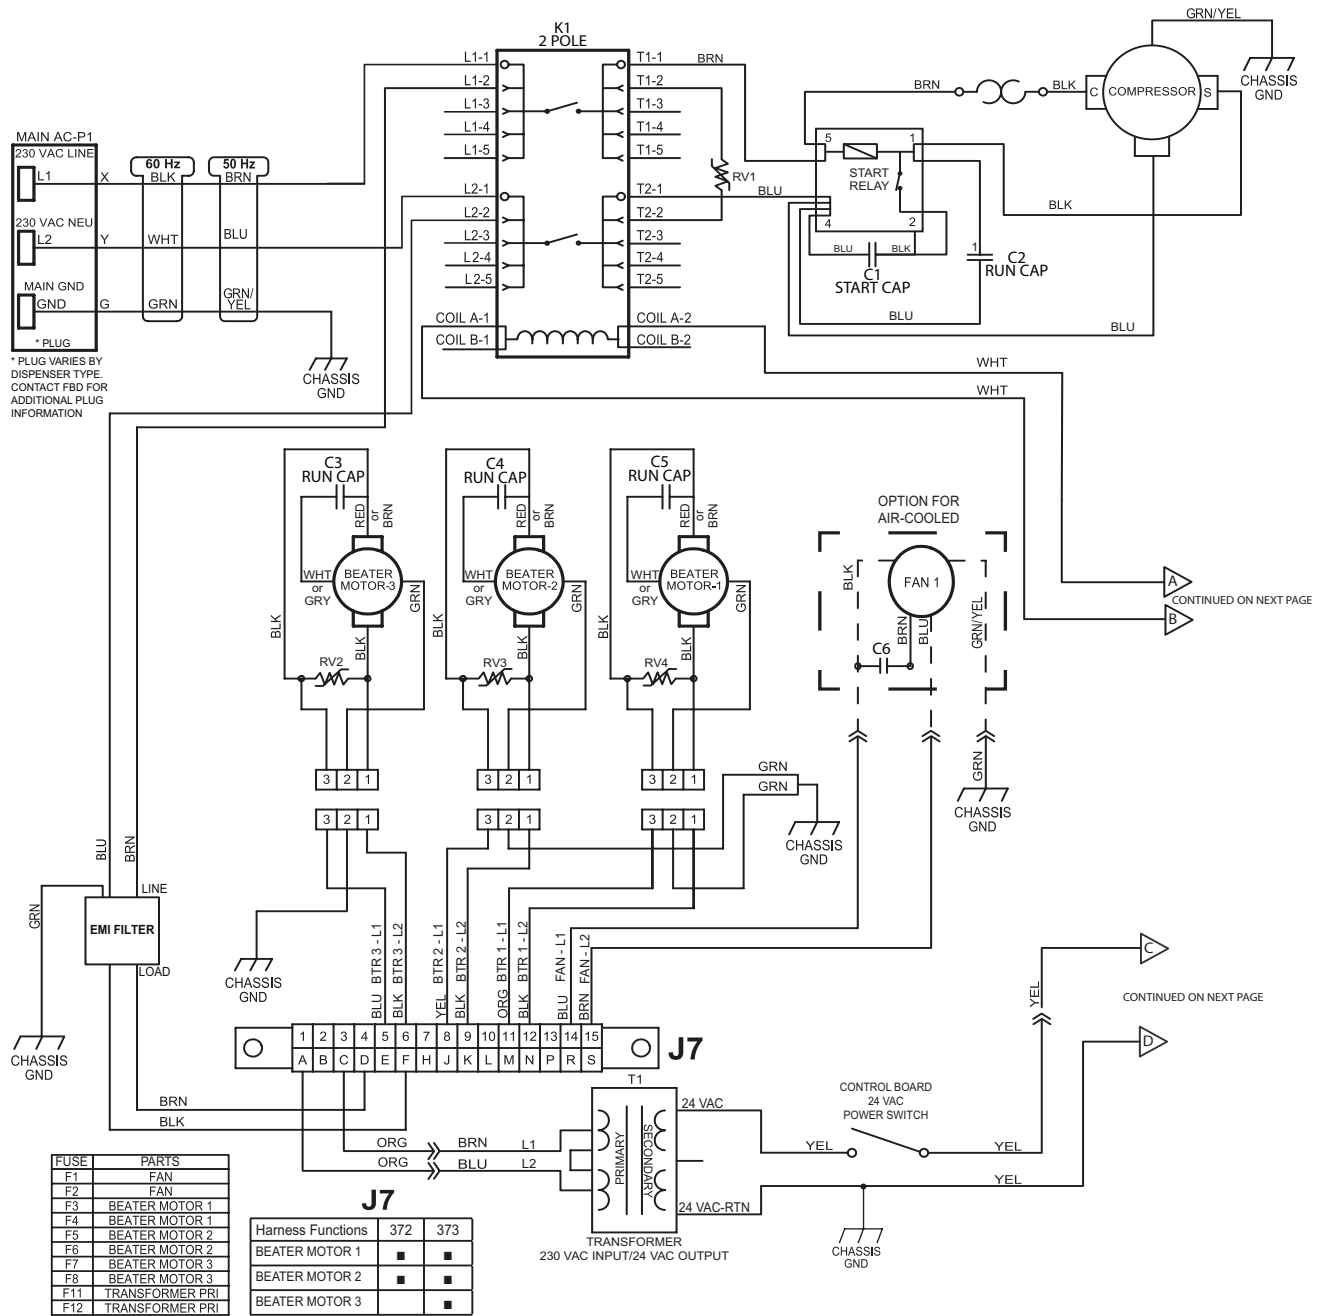


Figure 11.7 Electrical Diagram for 372 Standard Dispenser  
1 OF 3



# 37X INSTALLATION & OPERATION MANUAL

## 372/373 MODELS

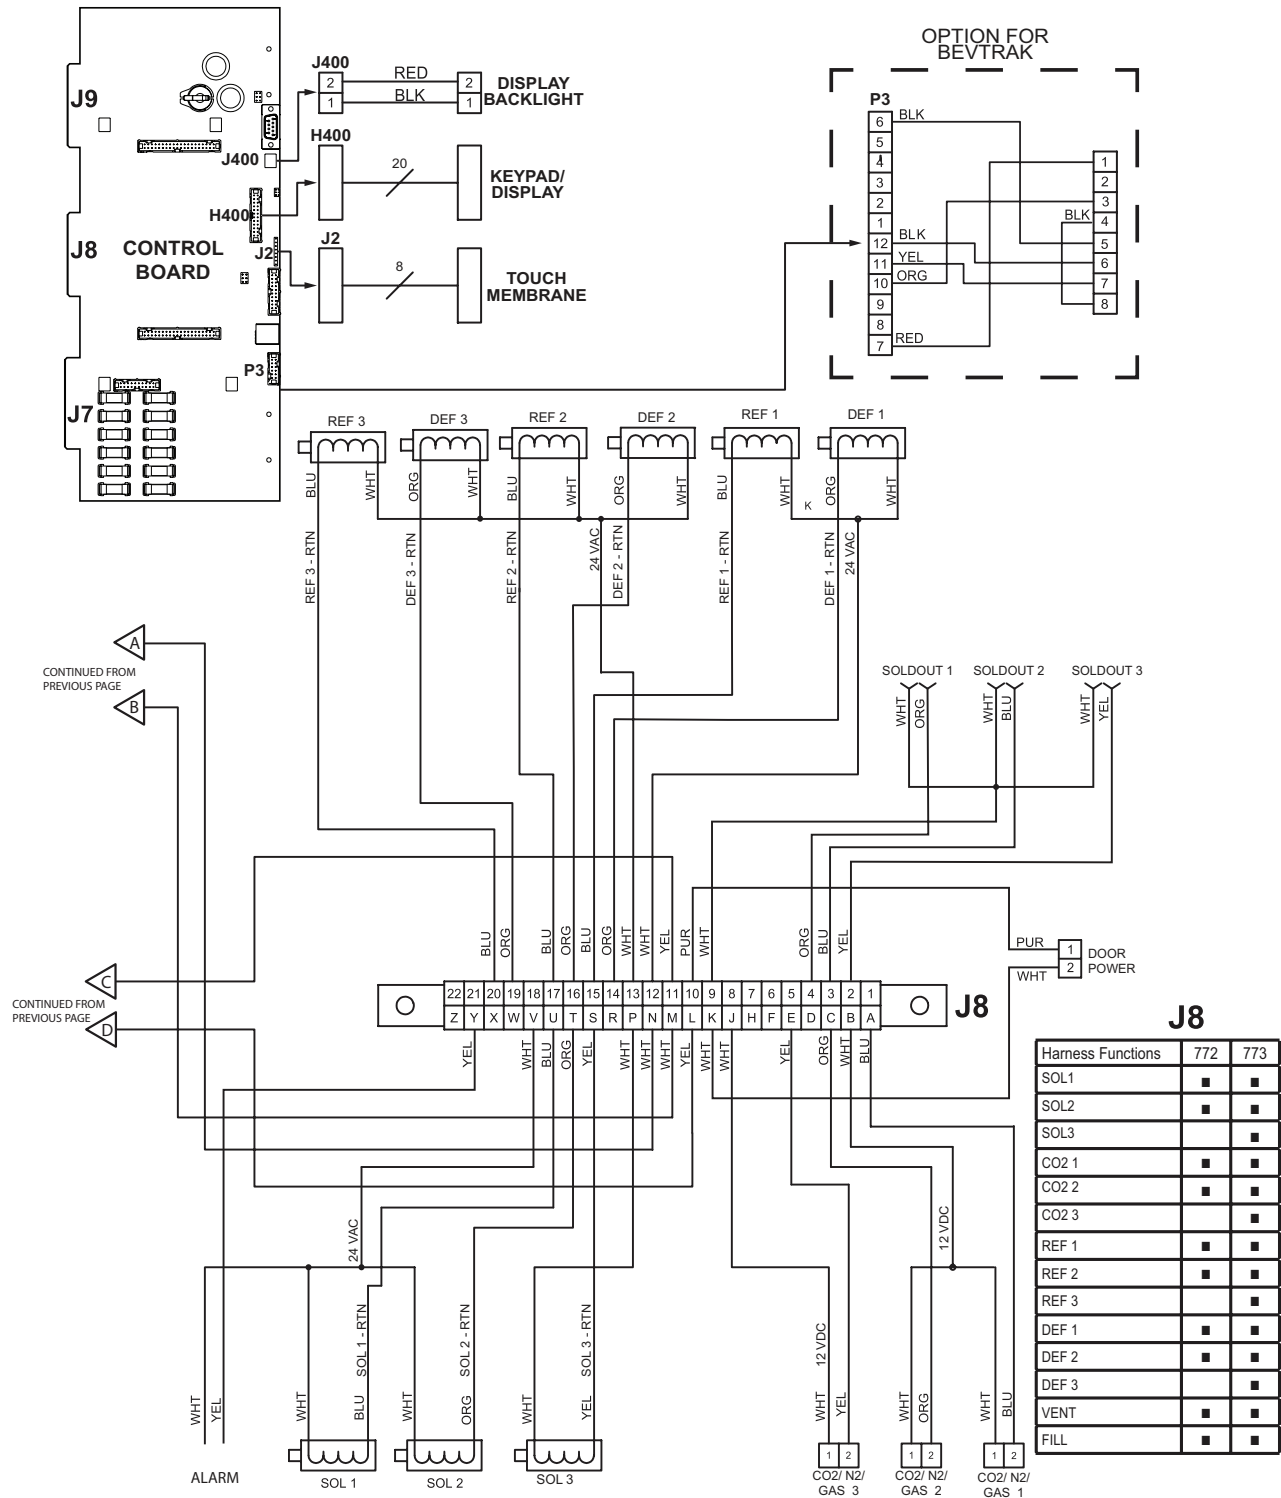


Figure 11.8 Electrical Diagram for 372 Standard Dispenser  
2 OF 3



# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

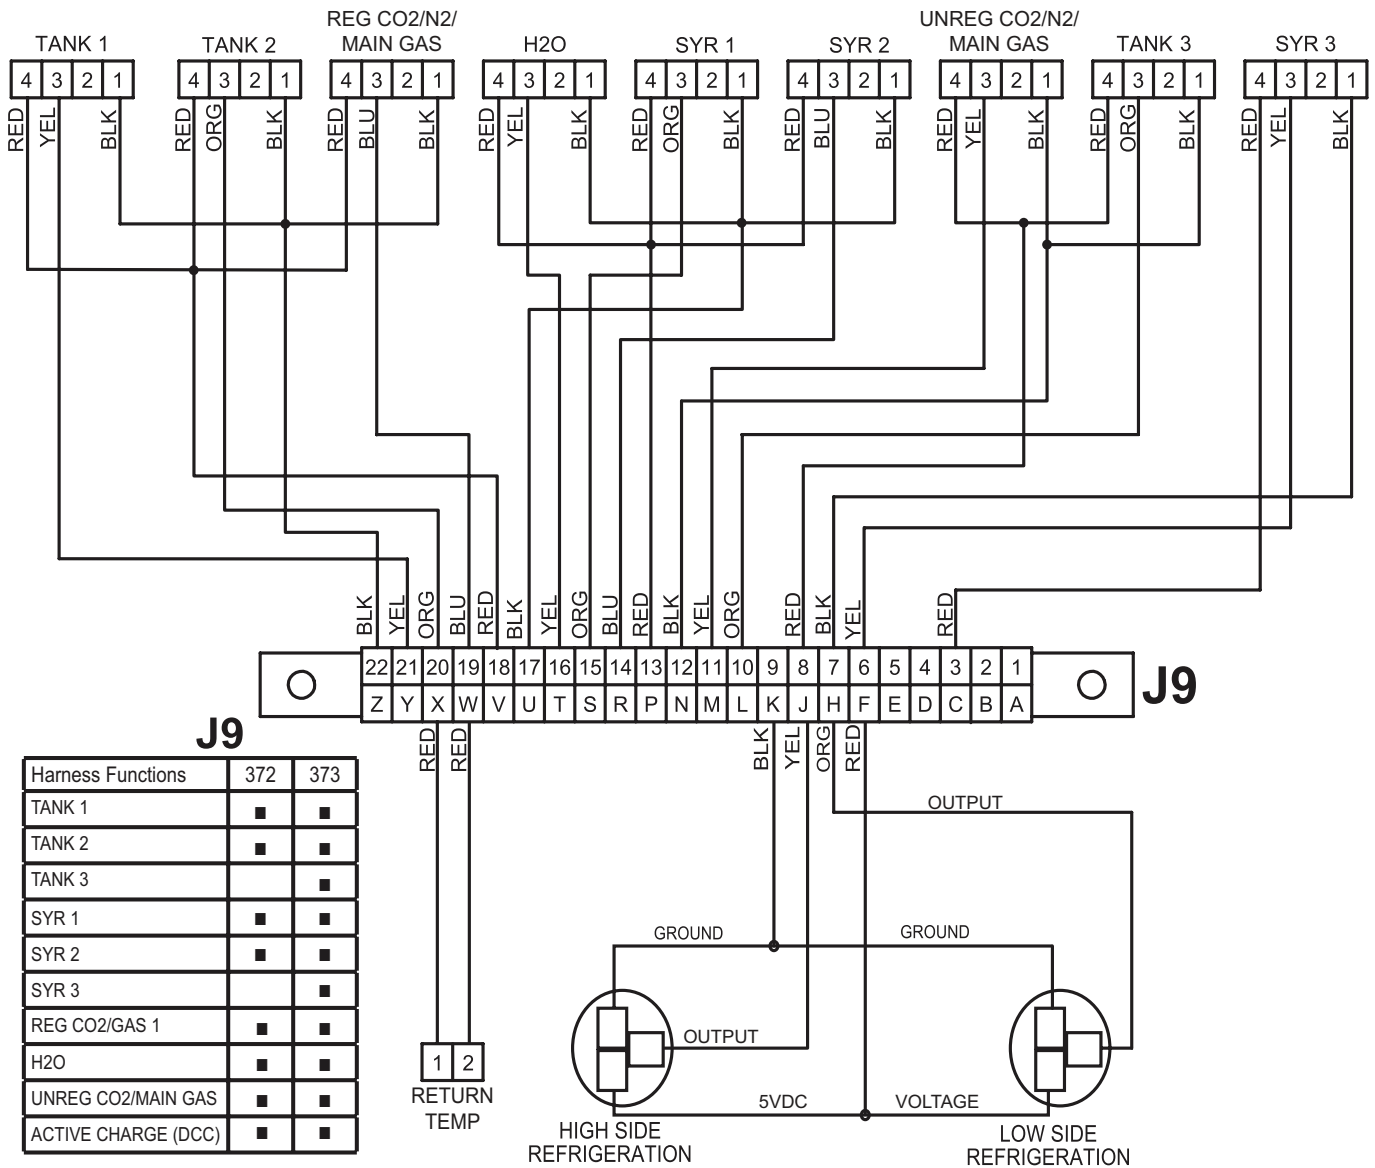


Figure 11.9 Electrical Diagram for 372 Standard Dispenser  
3 OF 3

# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

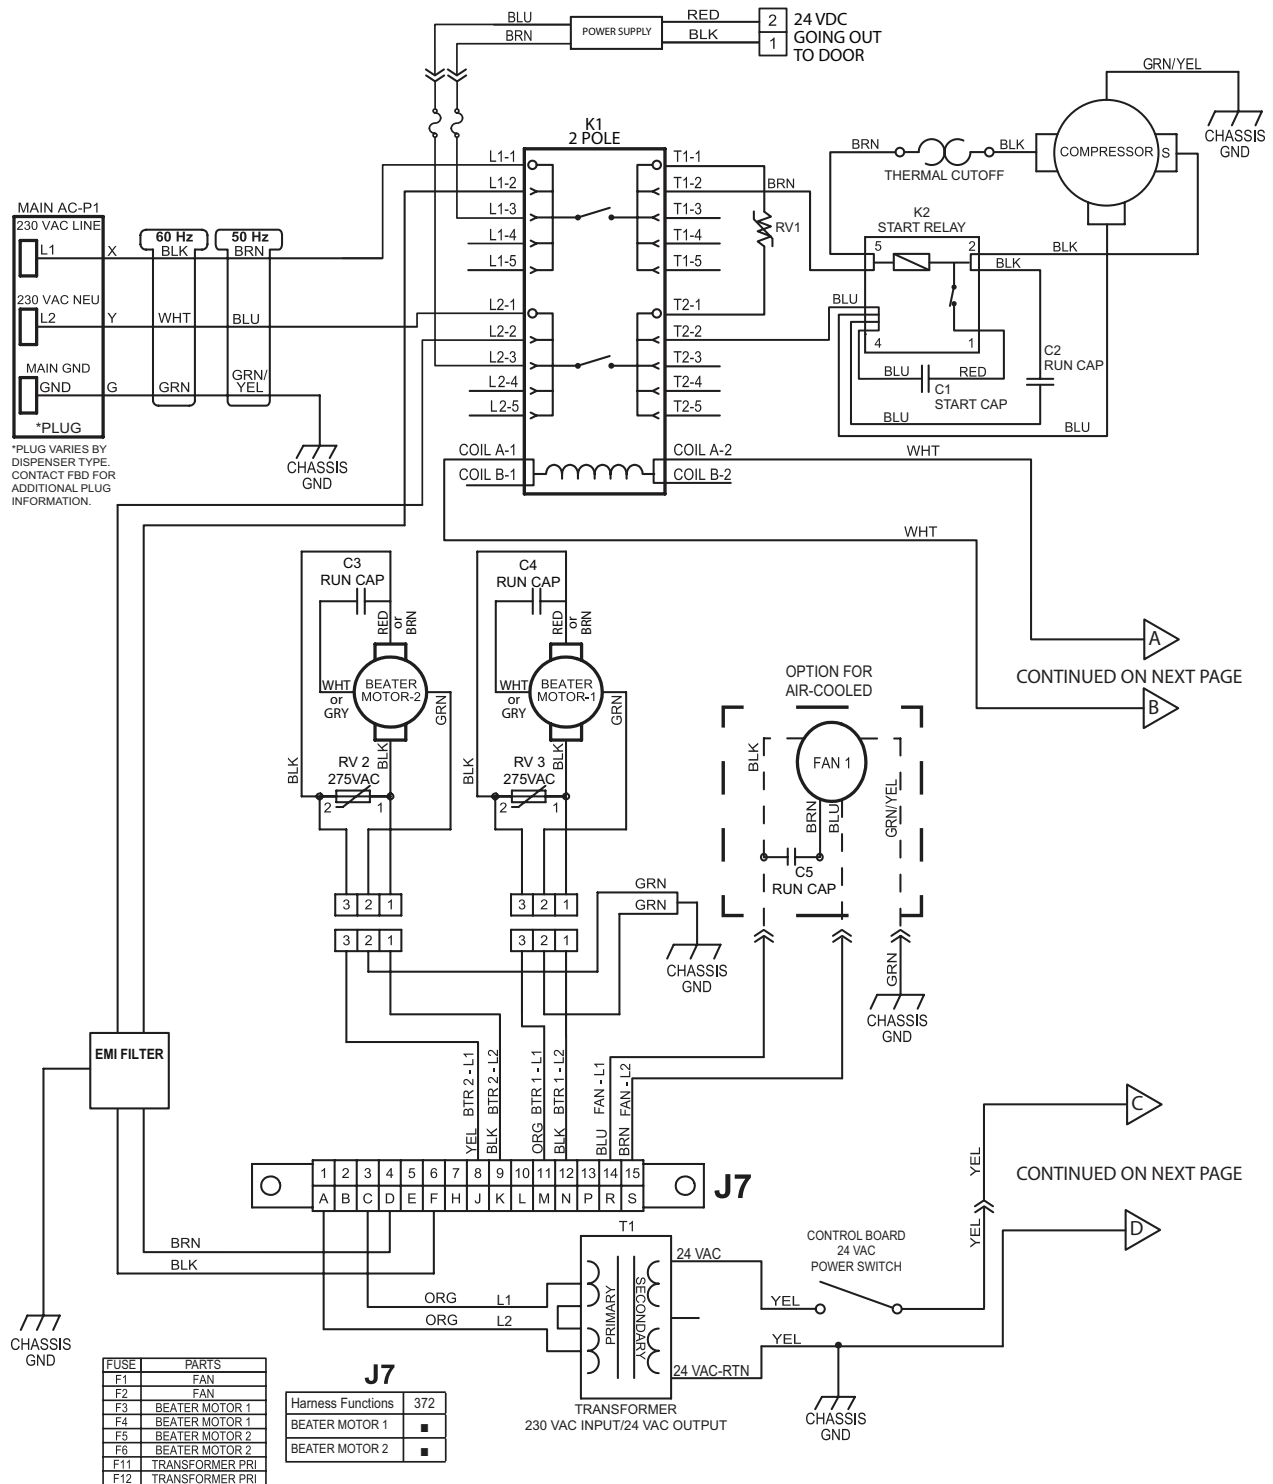


Figure 11.10 Electrical Diagram for 372 Multi-Flavor Dispenser  
1 OF 3



# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS


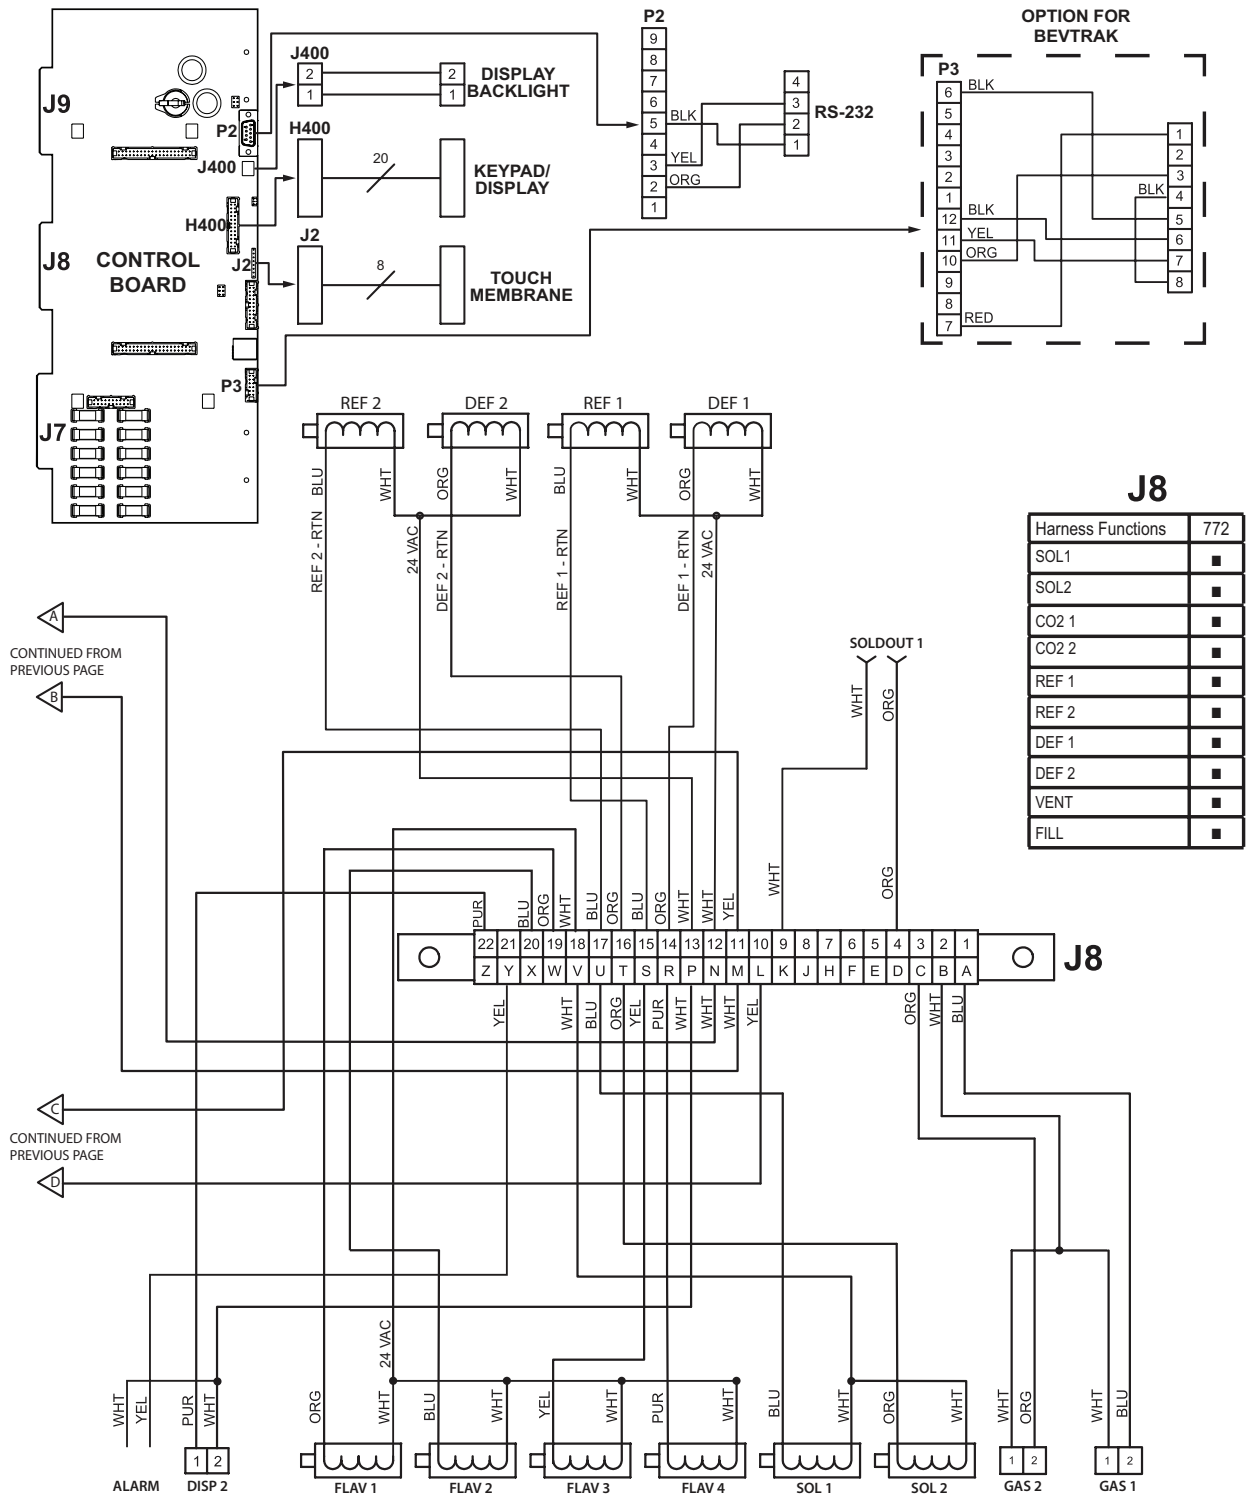


Figure 11.11 Electrical Diagram for 372 Multi-Flavor Dispenser  
2 OF 3

# 37X INSTALLATION & OPERATION MANUAL 372/373 MODELS

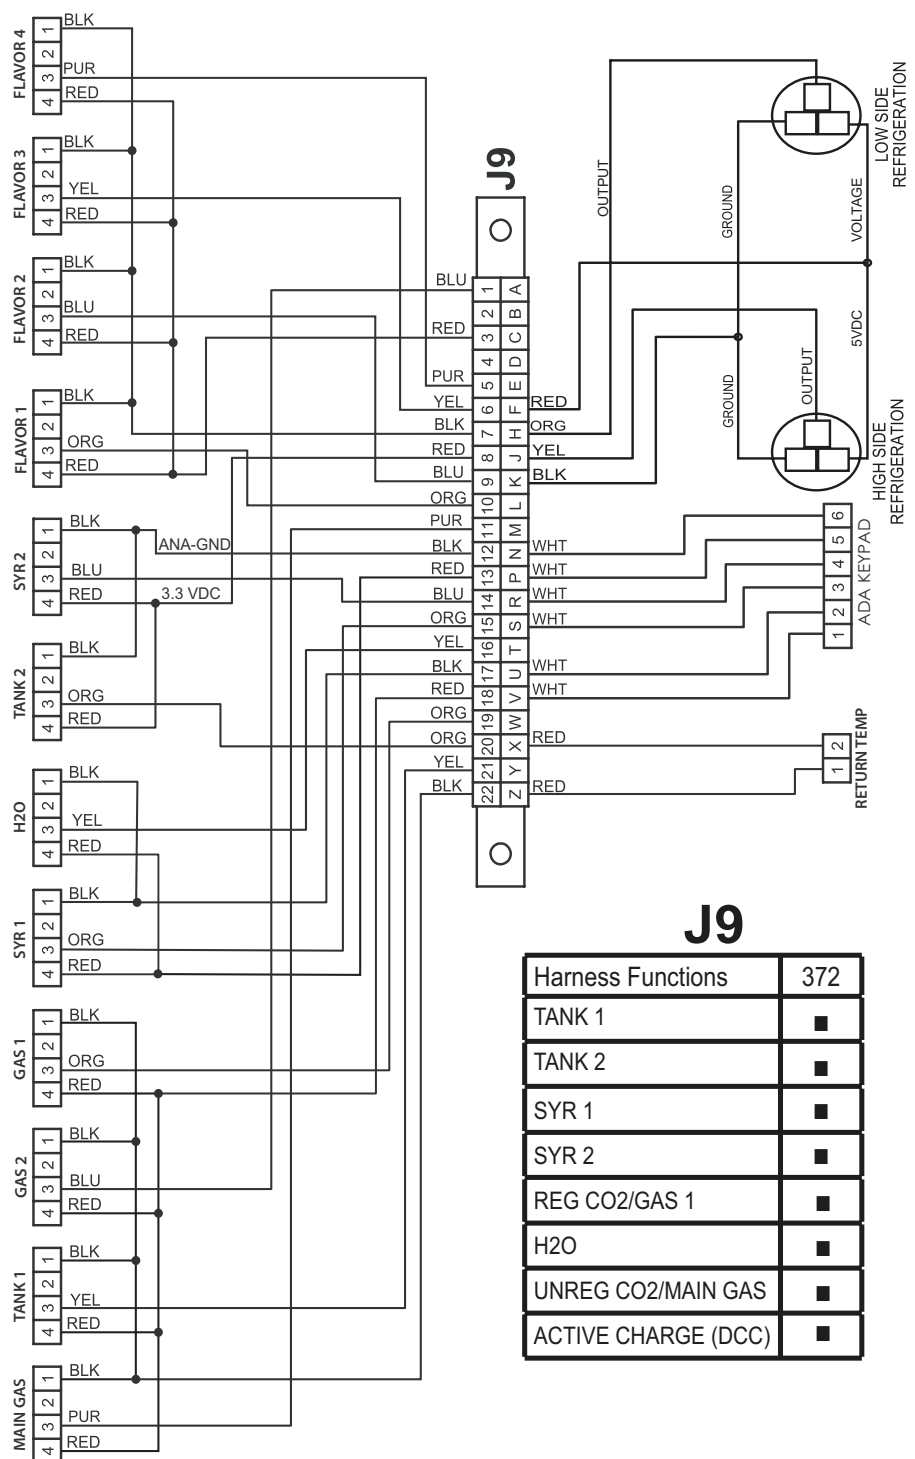

**J9**

Harness Functions	372
TANK 1	■
TANK 2	■
SYR 1	■
SYR 2	■
REG CO2/GAS 1	■
H2O	■
UNREG CO2/MAIN GAS	■
ACTIVE CHARGE (DCC)	■

Figure 11.12 Electrical Diagram for 372 Multi-Flavor Dispenser  
3 OF 3



## 11.4 Refrigeration Schematic Diagrams

Figure 11.19 shows the refrigeration schematic for 373 standard dispenser and is representative of the standard 372 and 372 multi-flavor, with the exception of the number of barrels.


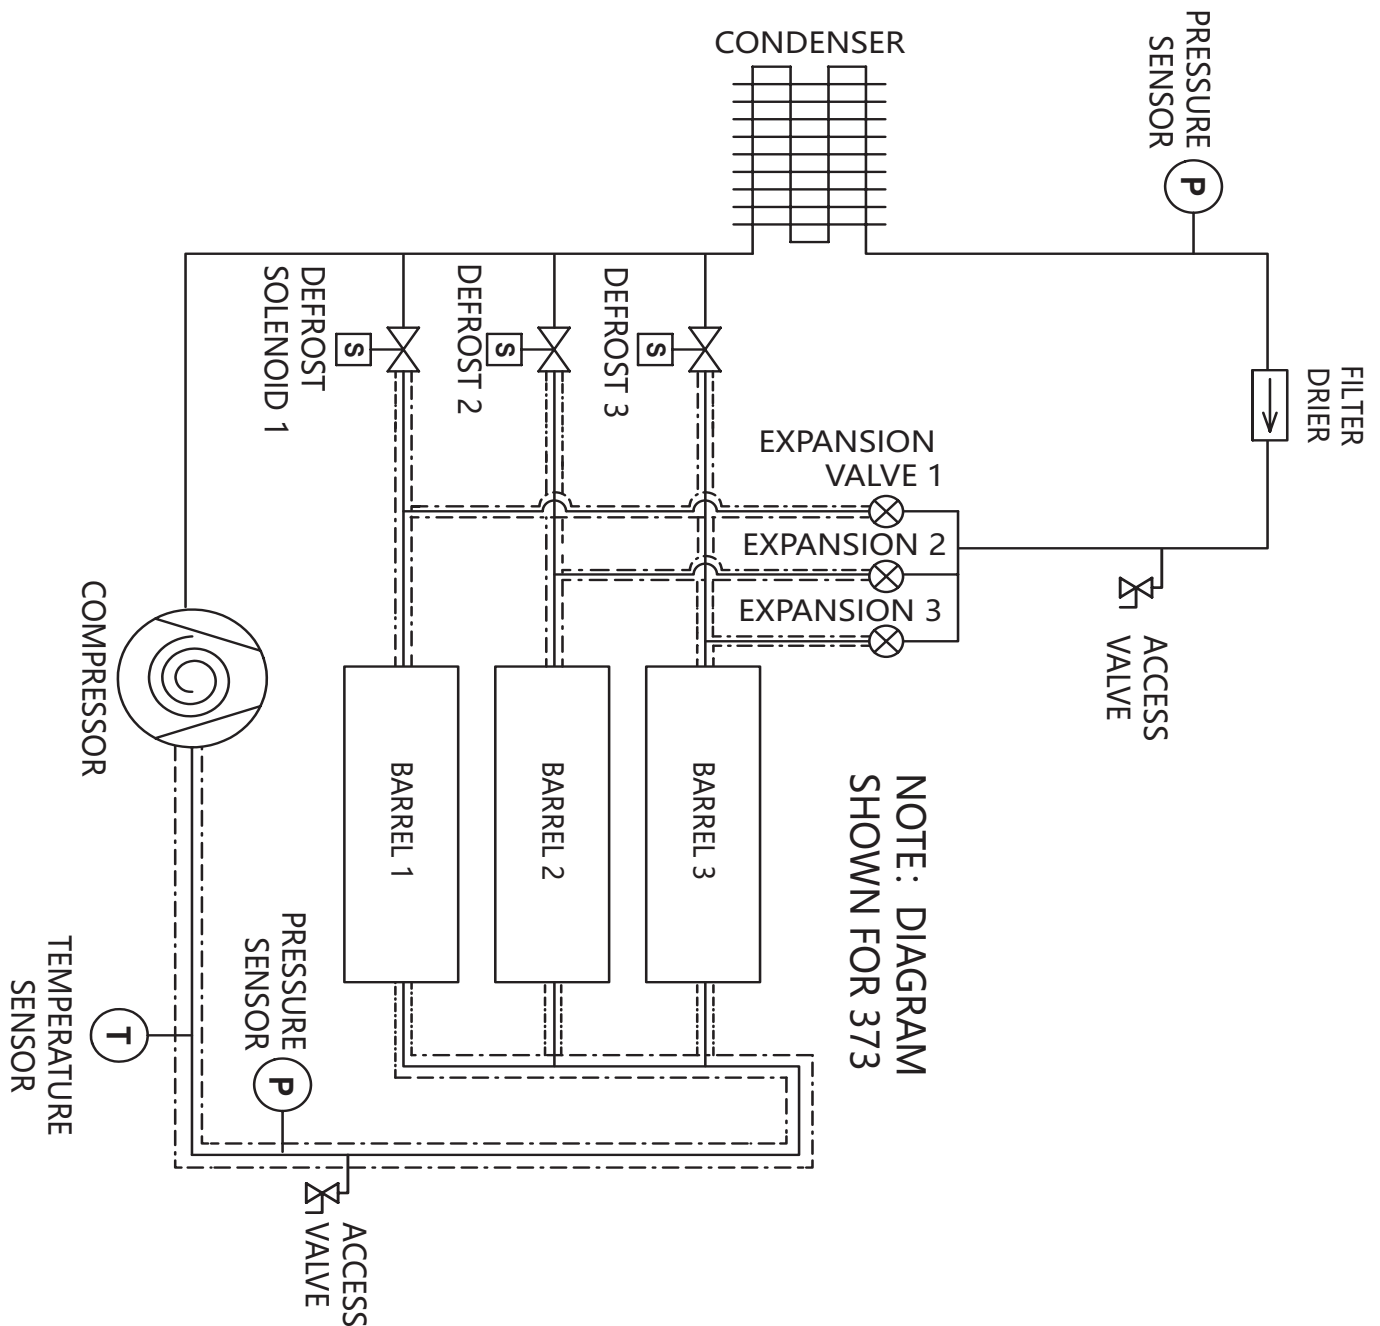


Figure 11.19 Refrigeration Schematic for 372 and 373 Air-Cooled Dispenser



## NOTES

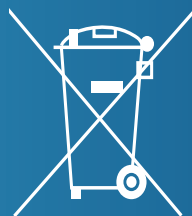

The disposal of this product must comply with local regulations. Dispenser is not to be disposed of with household waste. Contact the retailer where this dispenser was purchased or recycle by locating an authorized recycler.